

Professional Surveillance System User's Manual
(For MAC)

Version 4.04.

Table of Contents

1	OVERVIEW AND ENVIRONMENT	6
1.1	Overview.....	6
1.2	Environment.....	6
2	INSTALLATION AND UPGRADE	7
2.1	Installation.....	7
2.2	Un-installation.....	9
2.2.1	MAC Menu	Error! Bookmark not defined.
2.2.2	Start Menu.....	Error! Bookmark not defined.
2.2.3	Resource CD.....	Error! Bookmark not defined.
2.3	Upgrade	Error! Bookmark not defined.
2.3.1	Software of the same version	Error! Bookmark not defined.
2.3.2	Software of different version	9
3	INTERFACE	10
3.1	Login Interface.....	10
3.2	Initialization Interface.....	10
3.3	Main Interface	11
3.4	Interface Button	13
3.5	Video Control Zone	13
3.6	Screen Display Mode	14
3.7	Function Button.....	14
3.7.1	Task.....	15
3.7.2	Alarm Record	15
3.7.3	Playback.....	16
3.7.3.1	Device Record	16
3.7.3.2	Link Record (Activation Record).....	17
3.7.3.3	Local Record	18
3.7.3.4	Download.....	19
3.7.3.5	Dav to Avi	19
3.7.4	E-map.....	20
3.7.5	Configuration.....	24

3.7.5.1	Password Modification	24
3.7.5.2	Option	24
3.8	Right Tool Bar	27
3.8.1	Device List	27
3.8.2	PTZ Direction Control	29
3.8.3	PTZ Advanced	30
3.8.4	Tool	32
3.8.4.1	Begin/Stop record plan	33
3.8.4.2	NVD Control	33
3.8.4.3	Health Report	37
3.8.4.4	Log Search	38
3.8.4.5	Alarm Link Video (Alarm Activation Video)	39
3.8.4.6	Alarm Output Control	40
3.8.4.7	Color Configuration	40
3.8.4.8	Volume	40
3.8.5	Setting Manage	41
3.8.5.1	Scheme and Task (Task and Project)	41
3.8.5.2	Record Plan Configuration	44
3.8.5.3	Alarm Manage	46
3.8.5.4	Alarm Record Plan	50
3.8.5.5	E-map	52
3.8.5.6	Decode Card Configuration	56
3.8.5.7	User Management	58
3.8.5.8	Device Manage	59
3.8.5.9	NVD Manage	60
3.8.5.10	SNVD Manage	61
3.8.5.11	Extension Screen	62
3.8.5.12	User Configuration	66
3.9	Device Health Status	66
3.10	Full Menu	67
3.10.1	Modify Password	68
3.10.2	Device	68
3.10.3	Alarm	68
3.10.4	Record Manage	69
3.10.5	Scheme Task	69
3.10.6	E-map	69
3.10.7	Configuration	70
3.10.8	Log Query	70
3.10.9	Log out	70
3.10.10	Exit	71
3.11	Tray Menu	71
3.11.1	Modify Password	71
3.11.2	Alarm	71

3.11.3	E-map View.....	72
3.11.4	Color Default Setup	72
3.11.5	Scheme Task.....	72
3.11.6	Begin/Stop Record Plan	72
3.11.7	Log Query	72
3.11.8	Close Alarm Sound.....	72
3.11.9	Log out.....	72
3.11.10	Exit.....	72
4	OPERATION INSTRUCTION.....	73
4.1	Monitor Operation	73
4.2	Monitor Task and Monitor Project	74
4.3	PTZ Control	75
4.4	Playback	75
4.4.1	Device Record Playback	75
4.4.2	Local Record Playback	75
4.4.3	Download	76
4.4.4	Record Play Control	76
4.4.5	Others.....	76
4.5	Snapshot and Manual Record.....	76
4.6	E-map.....	76
4.7	Log out	77
5	PERIPHERAL DEVICE OPERATION.....	78
5.1	Decode Card	78
5.2	NVD	78
5.2.1	Menu	78
5.2.2	NVD Control Principle	78
5.2.2.1	Operation.....	79
5.2.2.2	Tour	80
5.2.2.3	Decode tour	81
5.2.2.4	TV adjustment	82

Welcome

Thank you for using our Professional Surveillance System (PSS)!
This user's manual is designed to be a reference tool for operation of your system.
Here you can find detailed operation information about PSS.

1 Overview and Environment

1.1 Overview

PSS is an abbreviation for Professional Surveillance System.

It is software to manage small quantity security surveillance devices. It releases with the device and does not support the products from other manufacturers.

It can view several camera channels from various devices, and it can view the recorded video files from various devices. PSS can support multiple scheduled arms to realize auto PC guard.

PSS supports e-map; you can clearly view all device locations.

It can create individual configuration files for each user, which allows you maintain your own habit and style.

Please note, there is only one running PSS in one PC.

The PSS can send out the device alarm information to the peripheral applications for extension use.

1.2 Environment

- OS: OS MAC OS X Snow Leopard version 10.6.3, kernel Darwin Kernel Version 10.3.0

2 Installation and Upgrade

2.1 Installation

Copy PSSSetup.pkg to your PC.

Double click the file to begin installation. See Figure 2-1.



Figure 2-1

Click next button to go to installation interface. See Figure 2-2.



Figure 2-2

Click next button, you can see there is an interface asking you to confirm the installation. See **Error! Reference source not found..**



Figure 2-5

During the installation process, you can click cancel button to exit.
After installation, you can see an interface is shown as below. See Figure 2-3.

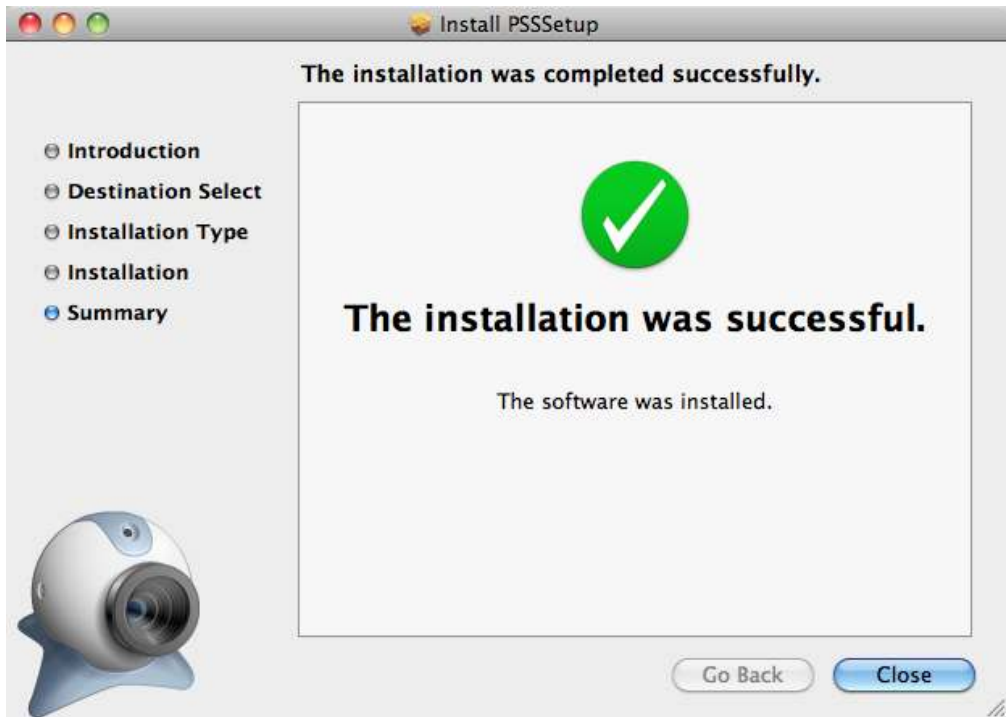


Figure 2-3

Click close button, you can complete the installation.

2.2 Un-installation

Just move PSS and PSS.app to your trash box. See Figure 2-8.



Figure 2-8

2.2.1 Software of different version

If your PC has installed different version, please uninstall the PSS first and then install the latest version. For detailed installation steps, please refer to chapter 2.1 Installation.

3 Interface



Double click PSS icon , you can go to the login interface.

3.1 Login Interface

Login interface is shown as in Figure 3-1.

- User name: Input the user account
- Password: Please input corresponding password to log in.
- OK: Click this button, system can verify the account and then enter the software main interface.
- Cancel: Click this button to exit login interface.

Note:

- If it is your first time to run the PSS program, default user name is admin and its password is admin too. Admin is a super administrator and can not be removed. It can add, modify or delete other user.
- For security reason, please modify your password after first log in.
- You can memory your password, so that when you can log in the next time, you do not need to input user name and password. Please note this function is for your convenient only. **Do not** enable this function in public PC.



Figure 3-1

3.2 Initialization Interface

Click OK button, system begins verifying user name and password and then go to the initialization interface. See Figure 3-2.

Please note it may take a little bit longer to initialize decode card, please be patient.

If it is your first time to use PSS, please go to chapter 3.7.5.2 Option to implement setup.



Figure 3-2

3.3 Main Interface

In the main interface, there are real-time monitor interface and other operation and function menu. See Figure 3-3.

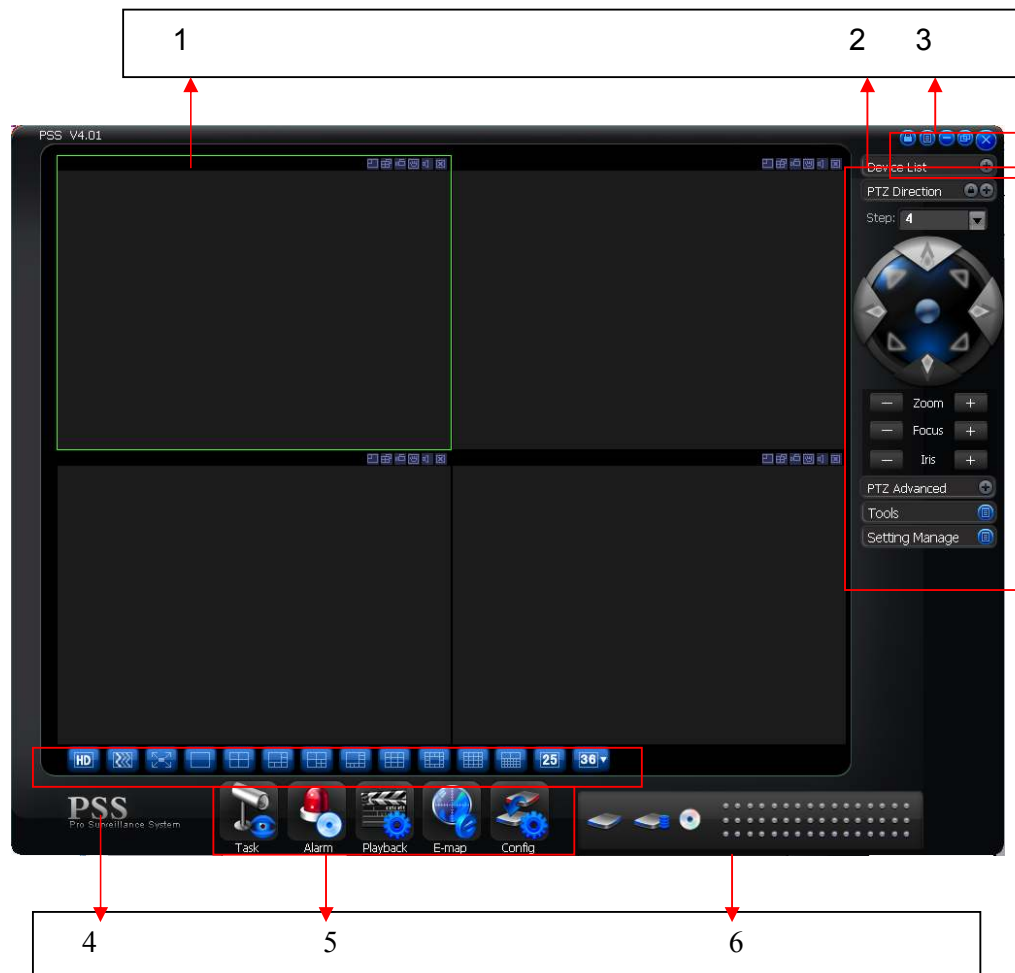


Figure 3-3

- Section 1: Current display window. It is circled by a green boundary. For video control information, please refer to chapter 3.5 Video control zone.
- Section 2: Right tool bar. Here you can view the five buttons: Device list (chapter 3.8.1).PTZ direction (Chapter 3.8.2), PTZ advanced (chapter 3.8.3), Tool (chapter 3.8.4), Setting Manage (chapter 3.8.5).
- Section 3: There are five buttons. Lock/Close/Minimize/Switch/Full menu. For close/Minimize/Switch button information, please refer to chapter 3.4 interface button. Click full menu button; you can view a menu tree shown as in Figure 3-4. For detail full menu information, please refer to chapter 3.11.

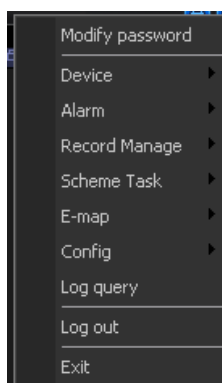


Figure 3-4

- Section 4: Screen display mode. Please refer to chapter 3.6 for detailed information.
- Section 5: Function buttons. Here you can view the following buttons: Task (chapter 3.7.1), Alarm (chapter 3.7.2), Playback (chapter 3.7.3), E-map (chapter 3.7.4), and Configuration (chapter 3.7.5).
- Section 6: Device health status. Please refer to chapter 3.9 for detailed information.

When PSS is running, you can also see there is a little icon on your left tray menu. See Figure 3-5.

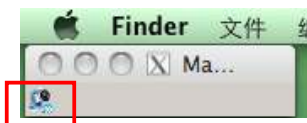


Figure 3-5

Right click mouse, you can see an interface is shown as in Figure 3-6. Please go to chapter 3.11 for detailed tray menu information.

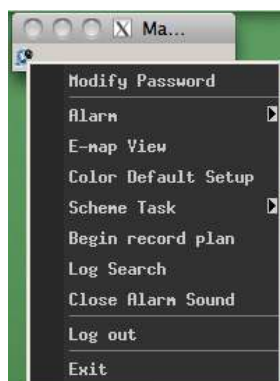
 












Figure 3-6

3.4 Interface Button

Please refer to the following sheet for interface button information.

SN	Icon	Function
1		Click it to display full menu.
2		Display sub-window.
3		Maximize/minimize, restore/switch button.
4		Lock/unlock sub-window.
5		Minimize
6		Close current sub-window.
7		Close current window.
8		Tray menu button.
9	Lock	<p>Click lock button, you can lock current application to avoid vicious operation. See Figure 3-7. You can see admin has locked current application.</p>  <p>Figure 3-7</p> <p>Click the unlock button in Figure 3-7, system pops up the following dialogue box. See Figure 3-8. You need to input the proper password to login again.</p>  <p>Figure 3-8</p>
10		<p>These two button are usually in user management or configuration interface.</p> <p>Click Ok to save current modification and then exit. Click Cancel to exit without saving current setup.</p>

3.5 Video Control Zone

On the video upper right, there are six icons. See Figure 3-9.

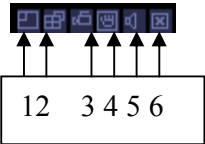


Figure 3-9

Please refer to the following sheet for detail information.

1	Digital zoom	Click this button and then left drag the mouse in the zone to zoom in. Right click mouse system restores original status.
2	Change show mode	Resize or switch to full screen mode. You can double click mouse to change the mode.
3	Local record	When you click local record button, the system begins recording. The recorded file is saved to system folder.
4	Capture picture	You can snapshot important video. All images are memorized in system folder.
5	Audio	Turn on or off audio.(It has no relationship with system audio setup)
6	Close video	Close video in current window.

3.6 Screen Display Mode

Screen display mode interface is shown as in Figure 3-10.

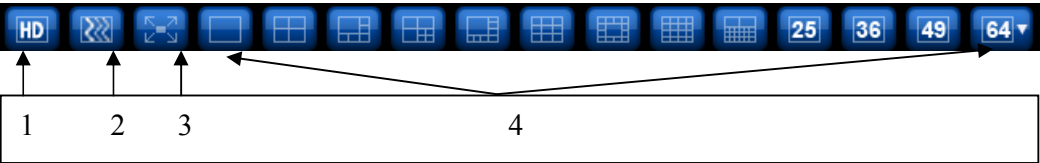


Figure 3-10

From the left to the right, there are video quality, real-time/fluent button, full-screen button and 1-64 screen modes.

Note:

In full-screen mode or the window is maximized, sometimes you may notice the height and width of small window can adjust according to the displayer.

3.7 Function Button

Function button is show as in Figure 3-11.

It consists of the five buttons: Task/Alarm/Playback/E-map/Config.



Figure 3-11

3.7.1 Task

Click Task button, the interface is shown as below See Figure 3-12.

Here you can enable/disable the task or project item.

Pause/restore button: Once you enabled one task/project, system display pause button.

“√” means current task is in progress.

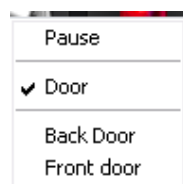


Figure 3-12

3.7.2 Alarm Record

Alarm record interface is shown as in Figure 3-13.

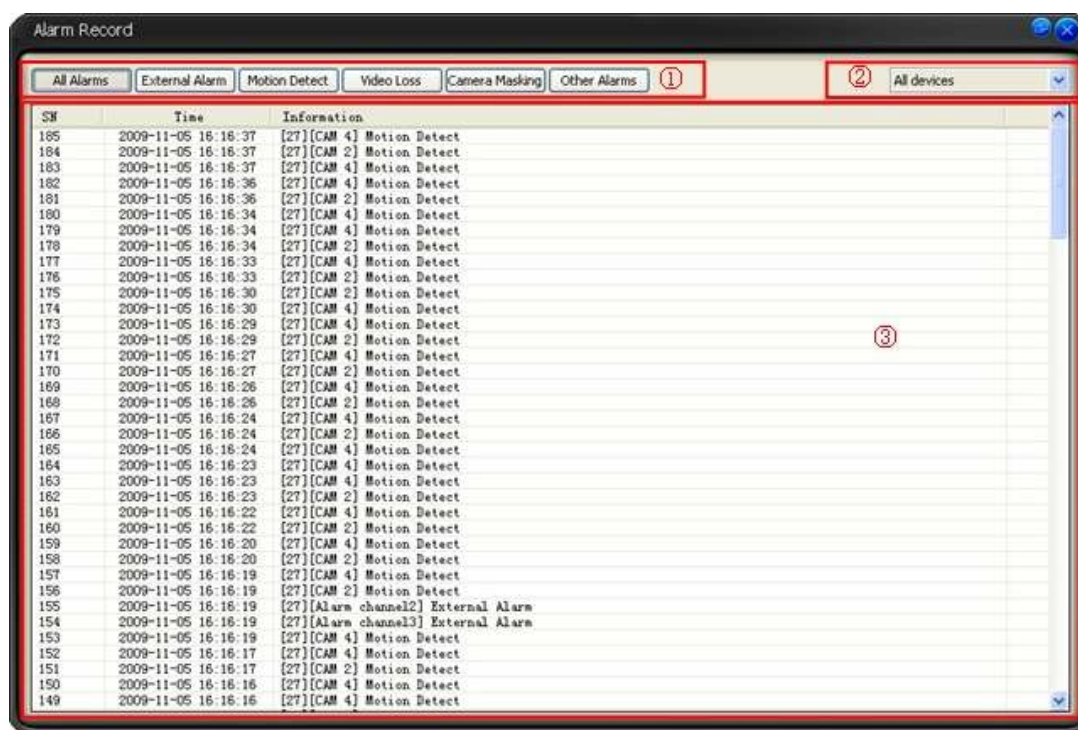


Figure 3-13

 
Please refer to the following sheet for detail information.

SN	Name	Function
1	Alarm Type	The alarm consists of six types: All alarms/External alarm/Motion detection/Video loss/Camera masking/other

		alarms.
2	All Devices	You can select a device from the dropdown list.
3	Alarm record	You can see alarm time and alarm detailed information.

Please go to chapter 3.7.5.2 Option to set “alarm record max amount”. Once the record is full, system automatically overwrites the previous one.

In chapter 3.7.5.2 Option, you can also set alarm information management operation.



Please go to chapter 3.8.5.3 Alarm manage to set alarm configuration information.

3.7.3 Playback

Here you can view the remote device you can control, and corresponding linkage (activation) record, local record playback and download.

Please note the play control button at the bottom of the interface is for current video window only.

3.7.3.1 Device Record

Device record interface is shown as in Figure 3-14.

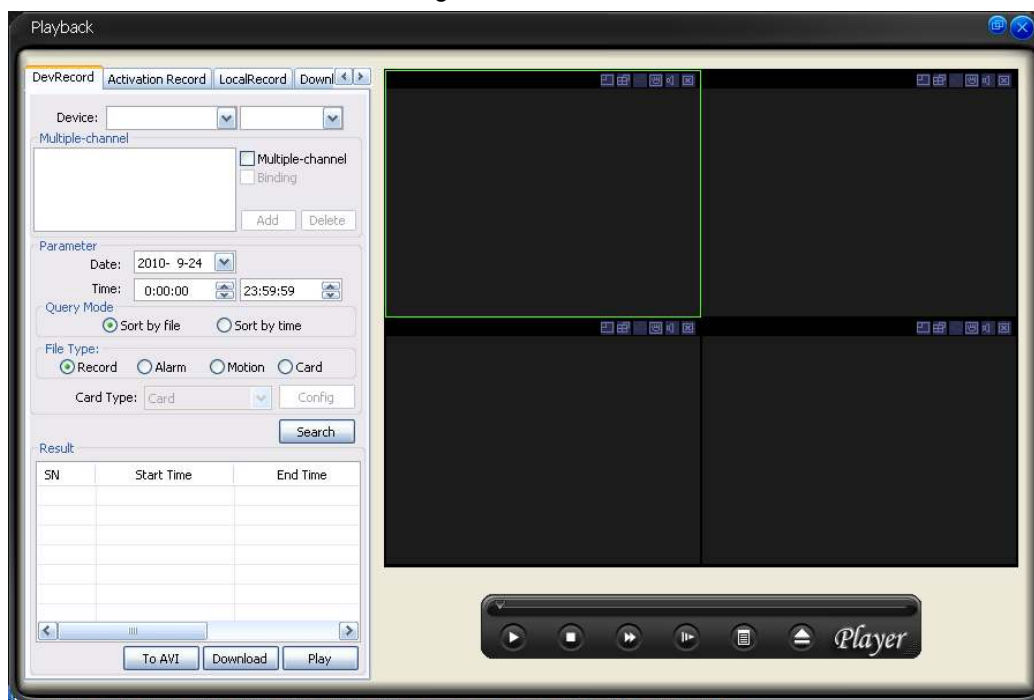


Figure 3-14

In this interface, you can search and download the file(s) from the managed devices. You can specify the time to search the files and then double click the file to playback (Please makes sure you network bandwidth is OK and you have proper right to playback.) See Figure 3-15.

The system will search the file(s) by date and list all the file information on the time axis. There are time axis and day axis, you can drag to operate. Red stands for the alarm record. Green stands for the general record. Yellow stands for the motion detect record.

You can click the download button to add the checked file(s) to the download task list. You can go to the download interface (chapter 3.7.3.4) to view download process or cancel current download operation. Double click the serial number column, you can select /cancel all files.

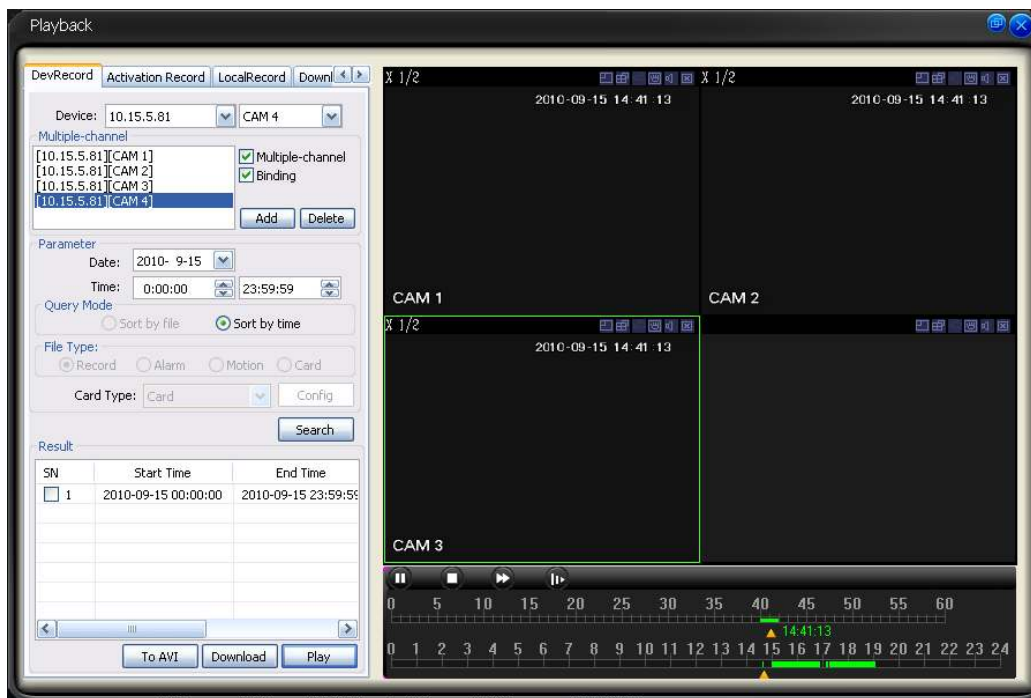


Figure 3-15

You can refer to the following interface for detailed playback information. See Figure 3-16.

SN	Name	Function
1	Pause /play	Play or pause the record play in the specified window.
2	Stop	Stop the record play in the specified window.
3	Fast play	Play the record in the specified window in fast speed.
4	Slow play	Play the record in the specified window in slow speed.
5	Time axis (1-60M)	Here you can view the detailed play time information (0:00-60:00. Unit is minute.) . It is the indication information of the yellow icon in the day axis (Button 6)
6	Day axis (0-24H)	It is to display the searched results by time. All the files listed below are in one day (00:00-24:00. Unit is hour.) Red is the alarm record file. Green is the general record file. Yellow is the motion detect record file.
7	Current play time	The current play time of the file.

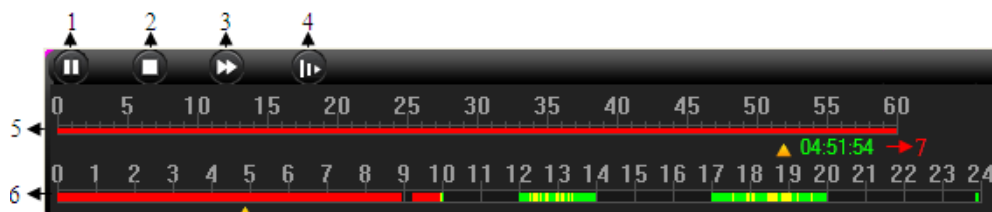


Figure 3-16

3.7.3.2 Link Record (Activation Record)

Activation record interface is shown as in Figure 3-17.

In this interface, you can search and playback the alarm activation record at the local-end.

Double click the file you can playback the video in current window. Click delete button, you can remove the select file(s). Double click the serial number column, you can select /cancel all files.

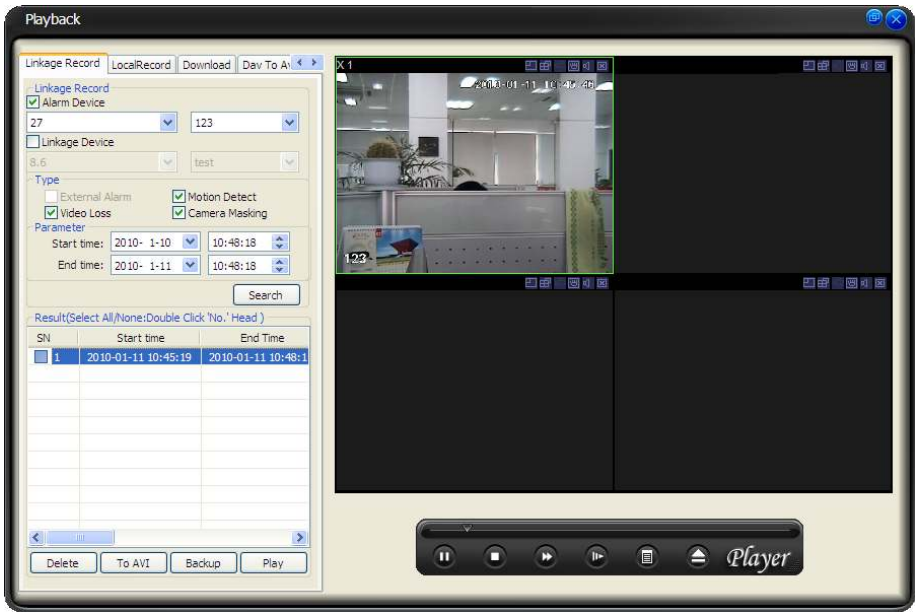


Figure 3-17

3.7.3.3 Local Record

Local record interface is shown as in Figure 3-18.

Here you can search and playback all files at the local-end. Double click the file name you can open the video in current window. If you select the image file, then system open the image. Click delete button, you can remove the select file(s). Double click the serial number column, you can select /cancel all files.

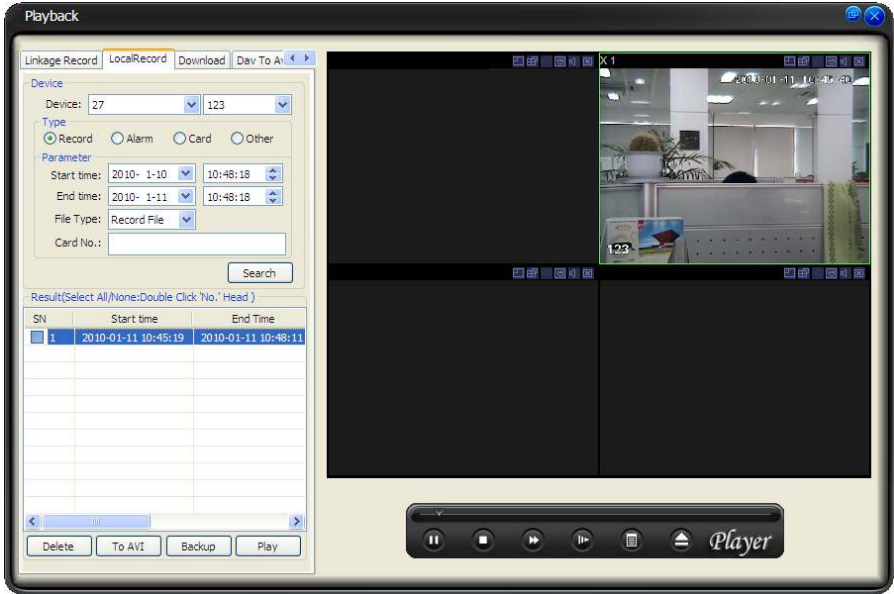


Figure 3-18

3.7.3.4 Download

Download interface is shown as in Figure 3-19.
In this interface you can see the download task process and record file information. You can click stop button to cancel current operation.

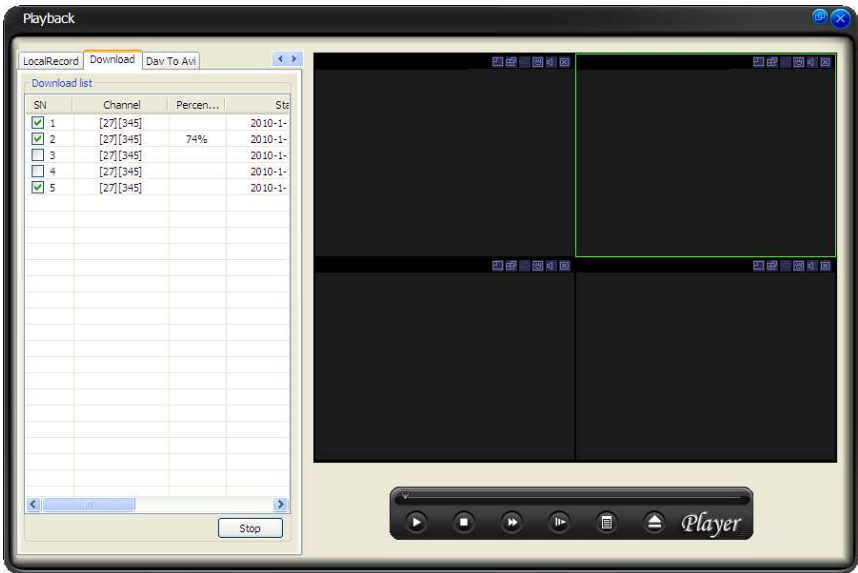


Figure 3-19

3.7.3.5 Dav to Avi

Dav to AVI interface is shown as in Figure 3-20.
In this interface, you can convert the Dav file to AVI file so that these recorded files can play in general player.

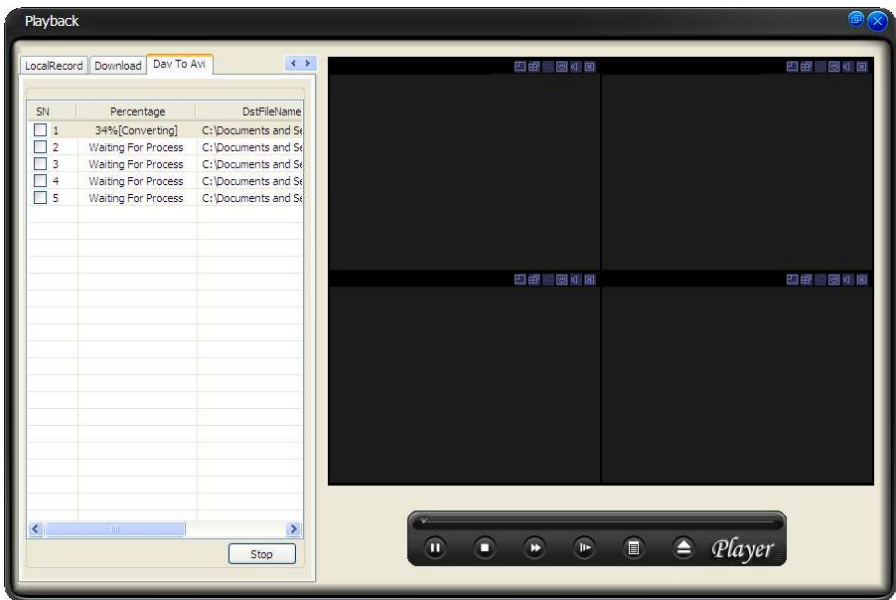


Figure 3-20

Please refer to the following sheet for detailed information.

Parameter	Function
Type	Search general record, alarm record, motion detection record and card record.
Alarm	Search alarm record.
Motion Detection	Search motion detection record.
Card	Search card record.
Start time	Set the file start time.
End time	Set the file end time.
Channel	Select the channel from the dropdown list.
Search	Click this button you can view the recorded file matched your requirements.
Playback	Select the file first and then click playback button to view the video. Double click serial number (SN) column you can select all files.
Download type	<ul style="list-style-type: none"> • Download by file: Select the file(s) and then click download button. • Download by time: Download the recorded file(s) within your specified period.
Download	<ul style="list-style-type: none"> • Select the file you need (multiple choices) and then click download button, you can see system pops up a dialogue box, please specify file name and path to download the file(s) to your local pc. • Input the downloaded file name, specify the path and then click OK button. You can see system begins download and the download becomes stop button. There is a progress bar for your reference.
Linkage record	You can search the alarm activated record in the local end. Double click the file name you can open the video in current window.
Local record	Select local record to play. Double click serial number (SN) column you can select all files.

Important

Please note record save path and download save path are not the same. Please refer to chapter 3.7.5.2 Option.

3.7.4 E-map

Click E-map button, the interface is shown as in Figure 3-21.

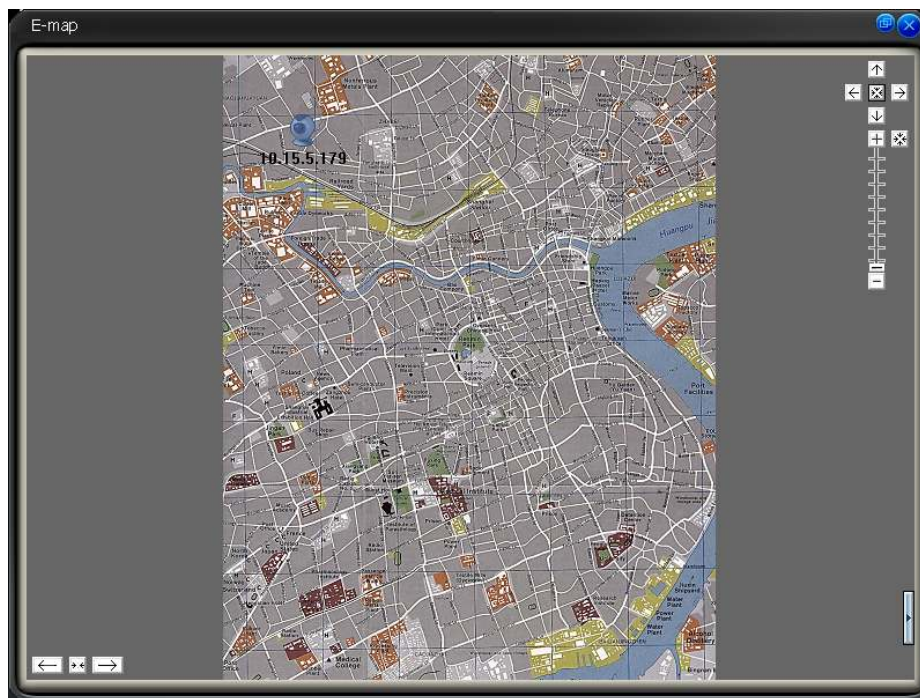


Figure 3-21



On the top right, there are five direction keys. You can click it to move e-map position. The centre button is to go to the e-map centre. It is valid when e-map is zooming in.



The left button is to view previous browser image and the next browser image. The middle button is to go back to the main e-map and clear browser history. Double click sub e-map to go to the next e-map. Double click camera to open the monitor video.



Click here you can view the node information.

Figure 3-22

In Figure 3-22, you can see you can use the buttons to zoom in or zoom out the e-map. Roll the mouse you can also zoom the e-map.

In Figure 3-22, click the button on the top right, system pops up the node information. Here you can view the e-map organization and its node information. See Figure 3-23.

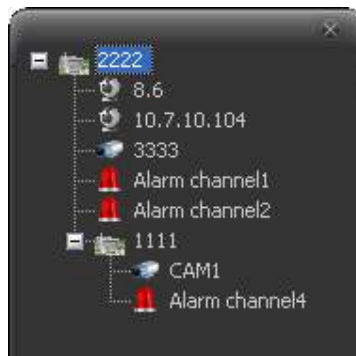


Figure 3-23

On the bottom right, there is a small e-map button (See Figure 3-24). You can click it to display or hide the small e-map. System hides the button when it is to display the small e-map. You can left click the e-map to display the button again.

System displays a red circle in the small e-map to represent the node. The green column in the small e-map is to represent the current displayed zone.

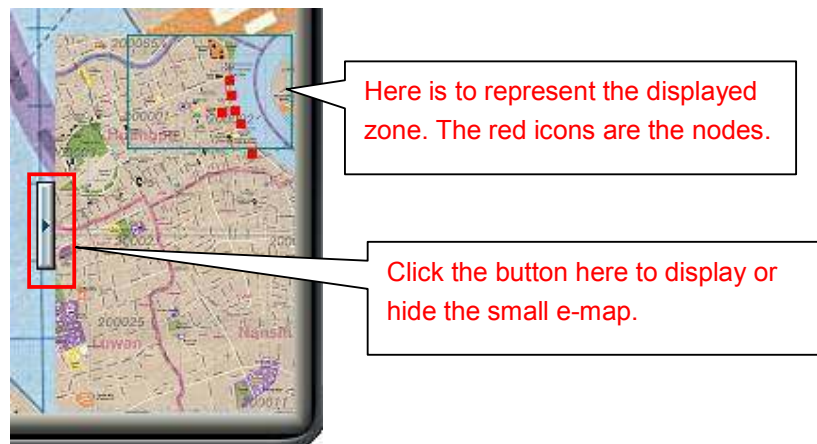


Figure 3-24

If you have armed the camera or alarm channel, when alarm occurs, the corresponding camera or alarm device will flash.

For detailed E-map setup and implement, please refer to chapter 3.8.5.5 E-map.

Right click mouse in the idle zone (There is no nod icon.); you can see the E-map configuration button. See Figure 3-25.

Click the E-map configuration button; you can go to chapter 3.8.5.5 E-map config.

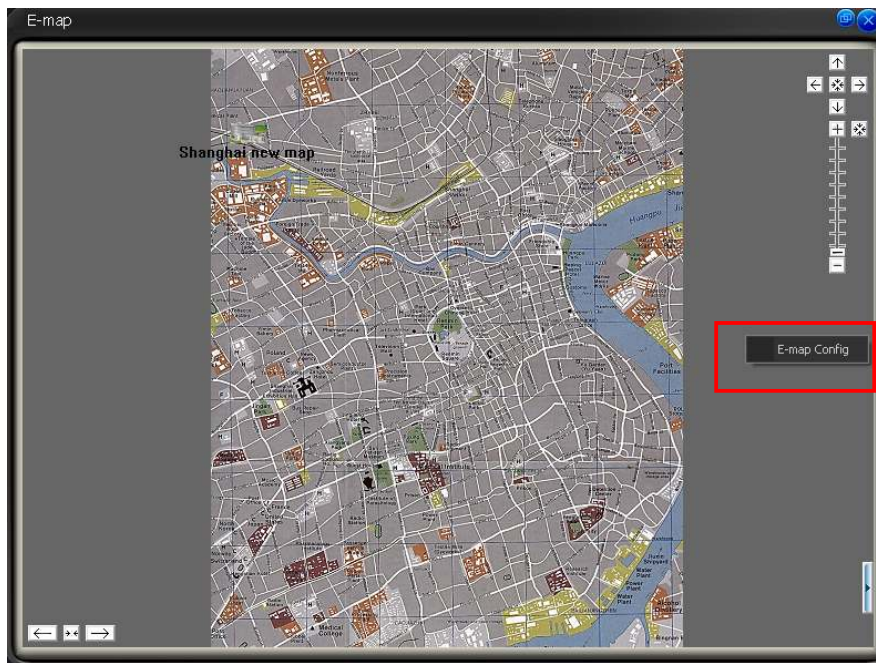


Figure 3-25

Right click the video channel in Figure 3-21; you can view the following interface. See Figure 3-26.

It includes three options: E-map configuration (chapter 3.8.5.5 E-map config.)/channel attribute/play in the pop-up window.

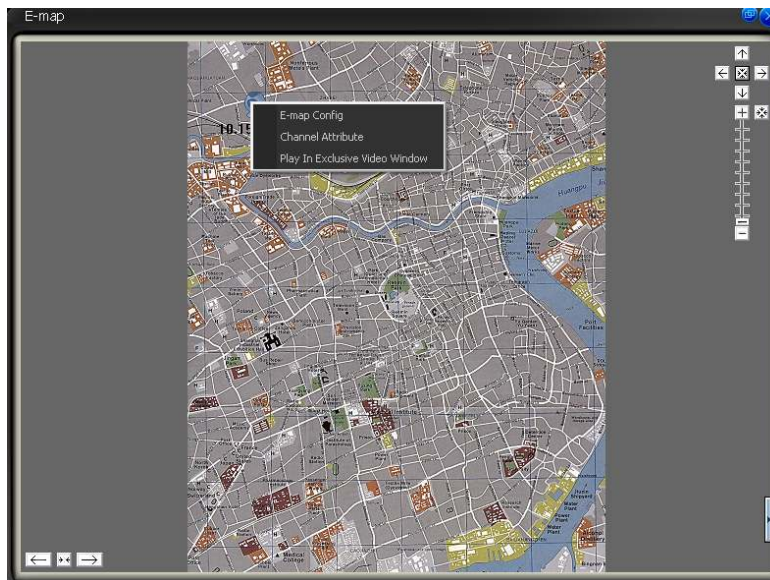


Figure 3-26

Click channel attribute, you can see the device name and channel title.

Click the play in pop-up window; you can see the system pops up the following window to display the video. See Figure 3-27.



Figure 3-27

3.7.5 Configuration

Click Config button, you can see an interface is shown as below. See Figure 3-28.

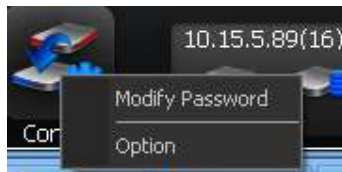


Figure 3-28

3.7.5.1 Password Modification

Click password modification button, system pops up the following interface. See Figure 3-29.

Figure 3-29

Please input the old password and then input new password twice to change the password.

3.7.5.2 Option

Click option button, the interface is shown as in Figure 3-30.

- System basic setup
- ✧ Language: PSS support various languages. Please select from the dropdown list.

- ✧ Verify password: Once you check the box here, you do not need to input the password when you want to log out. System just allows you to log out directly.
- ✧ Login all devices: User automatically logged in all devices after PSS booted up.
- ✧ Load decode card when system boots up: Load the decode card automatically after you logged in.
- ✧ Auto start record plan: System automatically enables all record plans once you logged in.
- ✧ Auto pop up alarm information dialogue box: PSS pop up the alarm recode when alarm occurred.
- ✧ Auto login the PSS: When PSS booted up, system uses the previous account to login the PSS.
- ✧ Auto runs PSS when system boots up: After you PC completely booted up, system automatically runs PSS.
- ✧ Hotkey Setup: Here you can set hot key for the operation button. Please note system default debug hot key is F12. Do not set the debug key when you set the hotkey button.
- ✧ Displayed items in the right bar: System show which operation button by default.
- ✧ Preview picture: Open image mode when preview. If you check the box, then the picture will be displayed in the system default program. If you do not check the box then it will displayed in the PSS.
- ✧ Display alarm item in the interface: Here you can specify you most concern alarm items. Please refer to chapter 3.9 device health statuses for detailed information.
- ✧ Automatically register service listening port: You can input listening port value here.
- ✧ Get all devices health report enable: You can check the box to get all devices health report (chapter 3.8.4.3.)
- Record basic setup
 - ✧ Snapshot picture path: You can specify image save default path.
 - ✧ Device free minimum space (MB): Once system reaches the threshold, system will overwrite the old files automatically.
 - ✧ Picture file name rule: You can specify image name rule in the dialogue box.
 - ✧ Record Time (M): Please select from the dropdown list.
 - ✧ Recorded file path: You can specify the file save path.
 - ✧ Recorded file name rule: You can specify file name rule in the dialogue box.
 - ✧ Downloaded file path: You can specify the download file
- Auto start monitor setup
 - ✧ Auto start project: The project to be run.
 - ✧ Project name: please input the project you wan to run automatically.
 - ✧ Auto start task: The task to be run.
 - ✧ Task name: Please input the task you wan to run automatically.
 - ✧ Last run: The previous task and project will become active after you successfully logged in the PSS.
 - ✧ Save last monitor status: System will restore the previous monitor status when it boots up the next time.
- Synchronization time setup
 - ✧ Auto synchronizes the PC time to the device: System automatically synchronizes the time of the front-end device.
 - ✧ Sync time: You can set the time for the synchronization function operation. (Please make sure you have enabled synchronization function.)

- ✧ Auto restart device: Once the local PC time is earlier than the front-end device time, after the synchronization, front-end device needs to reboot to get the new time activated.
- Alarm record basic setup
- ✧ Alarm record max amount: The max record amount in the alarm record window. System automatically overwrites the earliest record once the record is full.
- ✧ Refresh interval: Here you can specify device health status update interval. Please refer to Chapter 3.9 device health status.
- ✧ Use pop-up window for alarm activation video: Once you check the box, system will pop up a new window to display the alarm activation video (not in the main interface). Please refer to chapter 3.8.4.5 alarm activation video for detail information.
- ✧ Alarm video window amount: You can specify the window amount for the pop-pup alarm activation video window. Please refer to chapter 3.8.4.5 alarm activation video for detailed information.
- ✧ Add disarming alarm message to the alarm record: Enable this function, system can add the disarming alarm message to the alarm record interface. Otherwise, system only displays the armed alarm message.
- ✧ Alarm information output port: After you checked the box here, all the alarm information from the devices will be communicated with the peripheral applications via the port you set here.

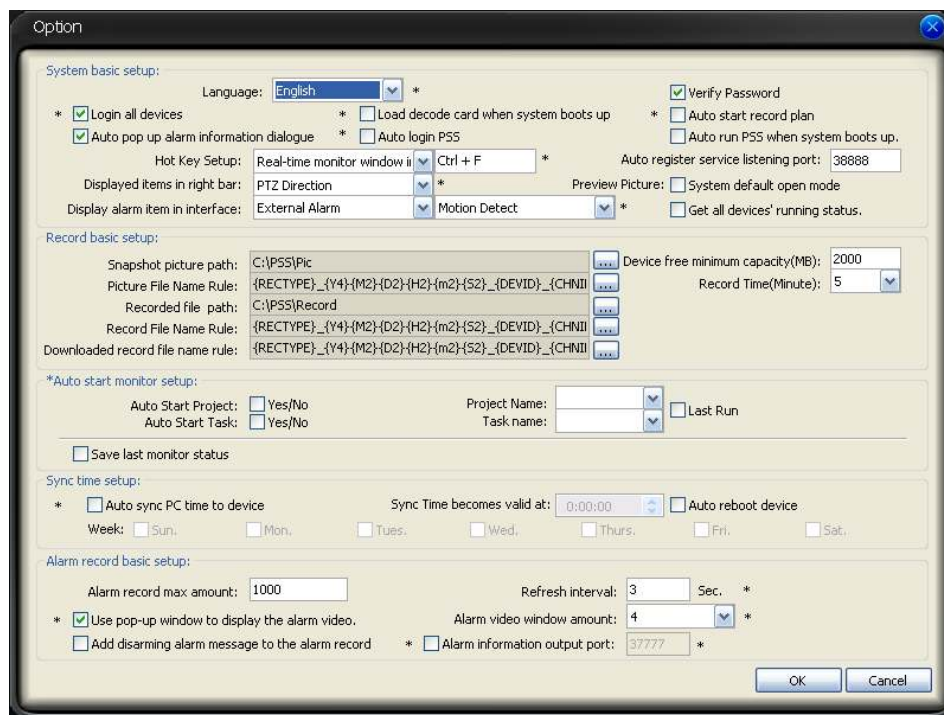


Figure 3-30

Note:

You need to reboot the system to activate the items with *!

Click OK button, you can see a dialogue box shown as in Figure 3-31.

Click Ok to reboot the PSS.

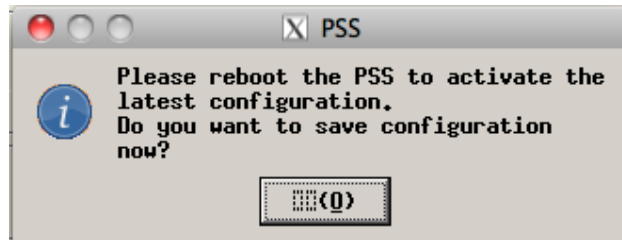


Figure 3-31

3.8 Right Tool Bar

System right tool bar is shown as in Figure 3-32.



Figure 3-32

3.8.1 Device List

Here you can view all the devices information you can configure. All logged in device channel have open. See Figure 3-33.

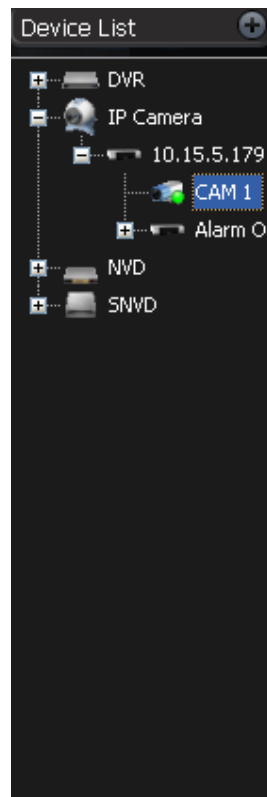


Figure 3-33

Select one device and then right click mouse, you can see device operation menu. It consists of four items: Log out/attribute/Audio talk mode/Advance. Please note the audio talk format and advanced is valid for logged in device only.

- Log out: log out current device.
- Attribute: Here you can view some basic device information such as title, IP and etc. See Figure 3-34.

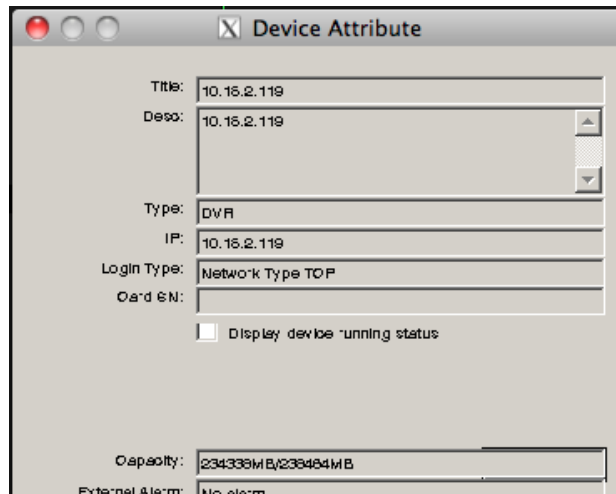


Figure 3-34

In Figure 3-34, check the “Show device running status” item, the interface is shown as below. See Figure 3-35.

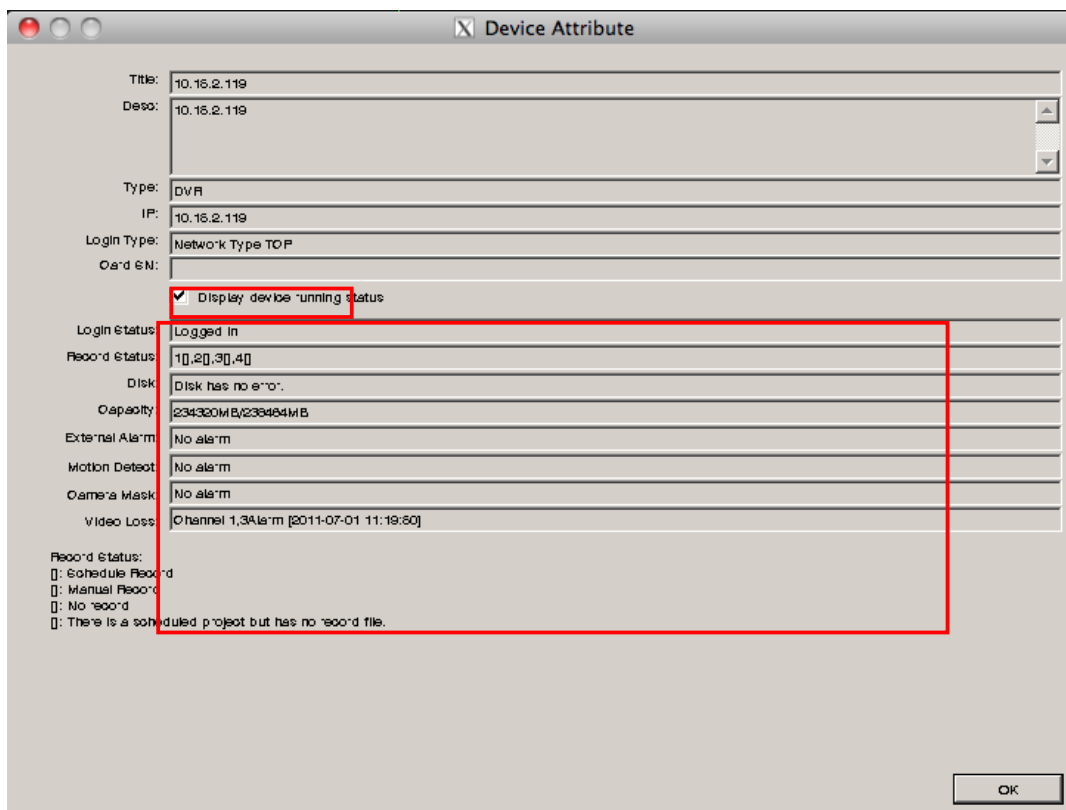


Figure 3-35

Important

Once you have checked the  **Get all devices' running status.** in Option interface (Chapter 3.7.5.2 Option), you can not enable  **Display device running status** function here.

- Audio talk format: System pops up the audio encode mode it supported. You can select the audio encode mode. The circle means there is audio talk in process. You can also right click mouse in one window to select the audio talk mode system supported.
- Advanced: It consists of synchronization PC/reboot/Device configuration.
 - ✧ Synchronization device time: it is to synchronize device time with the PC.
 - ✧ Reboot: It is to reboot current device.
 - ✧ Device configuration: Please refer to corresponding device user's manual for configuration information. Please note SVR does not support configuration function.

Important

Please note one device supports only one audio talk operation. Once you have enabled audio talk function in decode device, you can not enable audio talk in device operation. Audio talk mode G711U is for special device only.

3.8.2 PTZ Direction Control

If you want to use PTZ function, please make sure:

- Current device has PTZ function.
- You have proper right to control the PTZ.



 



If you still can not use PTZ function, please check device PTZ protocol is right or not.

Click the icon  or the "PTZ Direction" title to open the interface.

The PTZ direction interface is shown as in Figure 3-36.

The step value ranges from 1 to 8. There are eight direction keys.

In the middle of the eight direction arrows, Click this button, system goes back to the single screen mode. Drag the mouse in the screen to adjust section size. When the mouse move from the up to the down, you can see the screen zoom in. When the mouse from the down to the up, you can see the screen zoom out. Please note you need to use mouse to operate this function. Here is a sheet for you reference.

Name	Function key	function	Function key	function
Zoom		Near		Far
Focus		Near		Far
Iris		close		Open

 
 
Click the Lock icon , you can see the PTZ direction interface is overlay current interface. You can use this function to realize the PTZ direction control in one-window mode. Click the icon  again; you can lock it to the right tool bar frame.



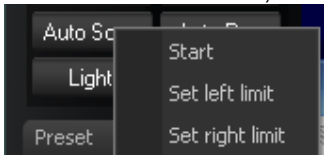
Figure 3-36

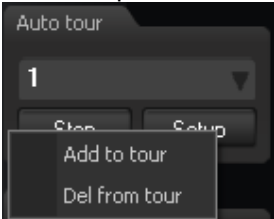
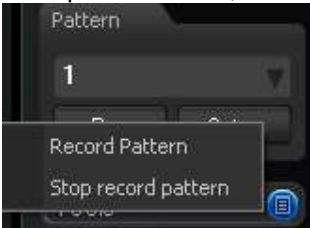
3.8.3 PTZ Advanced

Click PTZ advanced, the interface is shown as in Figure 3-37.



Figure 3-37

Parameter	Function
Scan	<p>Click auto scan button, the interface is shown as below.</p>  <p>You can set scan left limit and right limit and then start a scan. Move the camera to you desired location and then click left limit button.</p> <p>Then move the camera again and then click right limit button to set a right limit.</p>

Parameter	Function
Preset	Use direction keys to move the camera to your desired location and then input preset value. Click add button, you have set one preset.
Tour	<p>Click setup button, the interface is shown as in below.</p>  <p>Input auto tour value and preset value. Click add button, you have added one preset in the tour. Repeat the above procedures you can add more presets in one tour. Or you can click delete button to remove one preset from the tour.</p>
Pattern	<p>Click pattern button, the interface is shown as below.</p>  <p>You can input pattern value and then click start record button to begin PTZ movement. Please implement camera operation. Then you can click stop record button. Now you have set one pattern.</p>
Aux	For some special functions, you need to use Aux button.
Flip	For camera supports flip function, system can turn video upside down and then collect.
Light	For most fixed cameras, it has its own light.
Wiper	For most fixed cameras, it has its own wiper.

Click AUX button, you can see the following interface. See Figure 3-38.

 


Figure 3-38

In Figure 3-38, click Aux control, you can see an interface is shown as in Figure 3-39.

Here you can send out the aux command to the remote PTZ.

Please click the cancel button to exit the dialogue box.

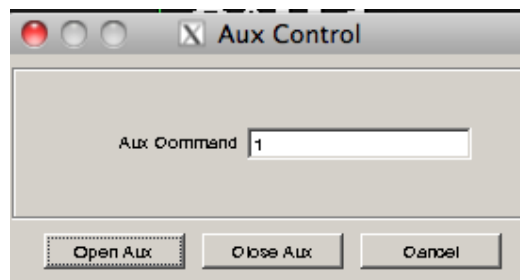


Figure 3-39

In Figure 3-38,click menu control, you can see an interface is shown as in Figure 3-40.



Figure 3-40

PTZ menu is from the internal PTZ device for you to control the PTZ. Click the open menu button, you can see the PTZ menu overlays the video window. See Figure 3-43.

Please make sure the real-time source device has the PTZ, and the PTZ has internal menu, otherwise you can not see the following interface.



Figure 3-41

The up/down/left/right is to for you to select the option item. Click enter button to confirm your current selection, execute corresponding function or go to the next menu.

Click back button to go back to the previous menu.

Click cancel button to close PTZ menu.

3.8.4 Tool

Click tool button, you can see the following interface. See Figure 3-42.

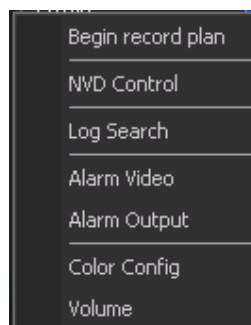


Figure 3-42

3.8.4.1 Begin/Stop record plan

After you set the record plan, you can click this button to enable it. Once there is running record plan, the item becomes “stop record plan” button.

3.8.4.2 NVD Control

NVD is a hardware device. You can use NVD to output the video to the video wall or other devices. The interface is shown as in Figure 3-43.

This interface allows you to manage multiple NVDs. You can connect the NVD to the video source device you want and then control the NVD tour. You can also adjust the TV monitor the NVD connected to. Click the four buttons at the top of the interface, you can switch the operation type.

- Operation: Go to NVD operation interface to set the video source the decoded channel connected to.
- Tour: Go to tour control interface to set TV output channel tour.
- Decode tour: Go to decode tour interface to control the tour between the decoding channels.
- TV adjust: Go to TV adjust interface to set the TV output video.

It consists of four sections.

- Section1: It is decoder control zone. The four big pane is the four video output channels. The four small windows in each pane is the four decoded channel of the video output channel(It is the four video window in the monitor it connected to). You can double click the small window to switch to 1/4 window display mode.
- Section2: It is the device list. Here you can view the NVD name the PSS currently controls.
- Section3: Here you can view two buttons login (logout)/NVD manage.
 - ✧ Log in/Log out: You can click it to log in or log out the device.
 - ✧ NVD manage: Please refer to Chapter 3.8.5.9 for NVD manage information.
- Section4: Video device list. Open the video and then drag the corresponding channel to the decoder output channel, the decoder can output the video from current channel to the specified device. Here you can also select stream type from the dropdown list. The options include: main stream/extra stream.

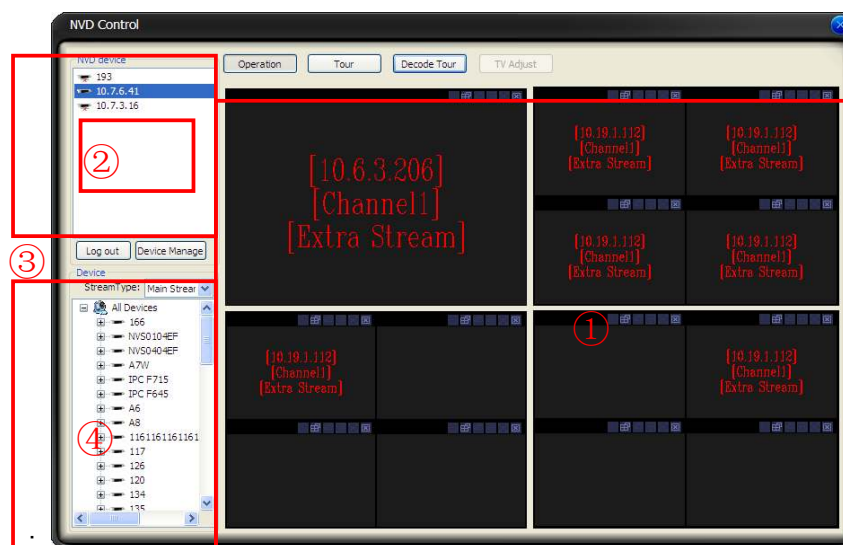


Figure 3-43

Tour

Click the tour button, the interface is shown as below. See Figure 3-44.

- Search: Search the selected TV output tour setup of current NVD device.
- Add: Add current tour information to the TV output channel of current device.
- Delete: Click it to remove the selected tour setup information.
- Delete all: Click it to remove all tour setups of current TV output channel.
- Tour: Click it to begin the tour setup.
- Interval: The operation interval between the tour setups.

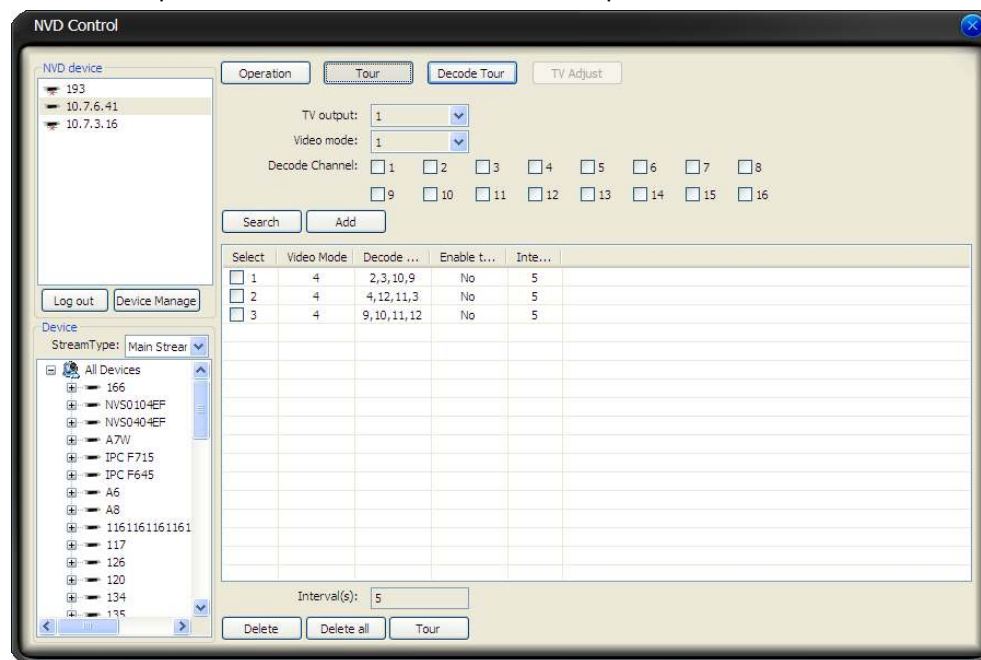


Figure 3-44

Decode Tour

Click decode tour button, the interface is shown as in Figure 3-45.

- NVD device: Here you can view the NVD device you selected from the NVD device tree.
- Decode channel: Here you can select the decode tour channel of the NVD device.
- Stay time (s): Here you can select the interval between the decode tour. It is the video stay time in each channel.
- Video channel: You can drag the video channel on the left corner to the column here and then release to set the video channel information.
- Add: Click it a odd current video channel tour information to the list.
- Update: Update the list to the latest information.
- Cancel: Restore the video channel information. Do not save current modification.
- Delete: Click it to delete the selected item in the list.
- Delete all: Click it to delete all the items in the list.
- Save: Save the latest setup information in the remote NVD device.
- Pause: Pause the decode tour operation of the remote NVD device.
- Resume: Restore the decode tour operation of the remote NVD device.
- Stop: Stop the decode tour operation of the remote NVD device.
- Start: Begin the decode tour operation of the remote NVD device.

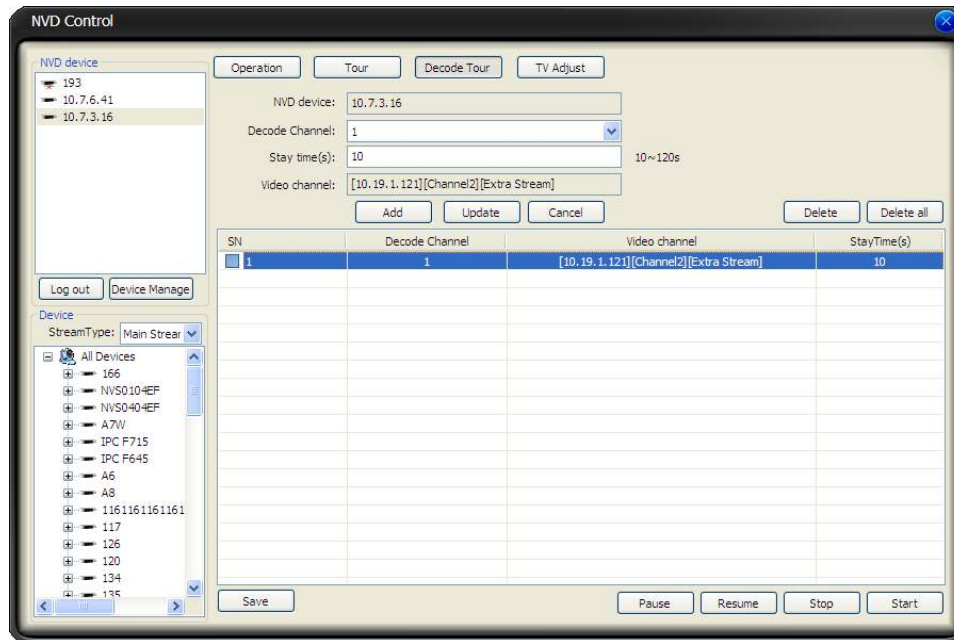


Figure 3-45

You can get the decoder output via the Figure 3-45, or you can send out the monitor task to get the decoder output. Please go to the chapter 3.8.5.1 to set monitor task first. See Figure 3-46. Here you have set a monitor task named "Test".

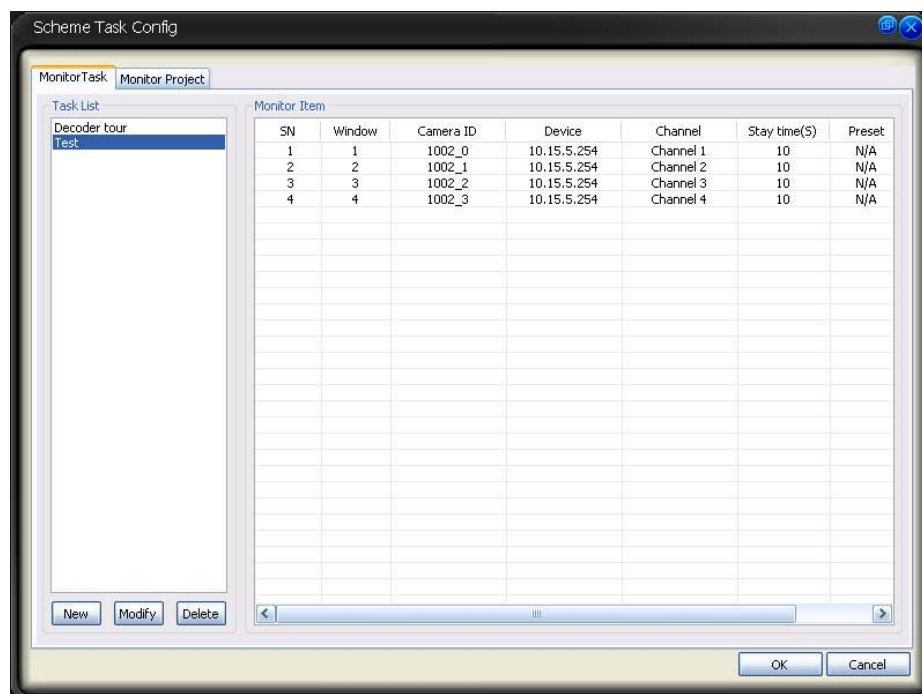


Figure 3-46

In the Device List pane, right click one output channel of the decoder; you can see the following interface. See Figure 3-47. Please select the monitor task first and then you can see the detailed monitor task in the specified decoder channel.

Comparing with your setup in the Decoder tour interface (Figure 3-45), this operation is more convenient.

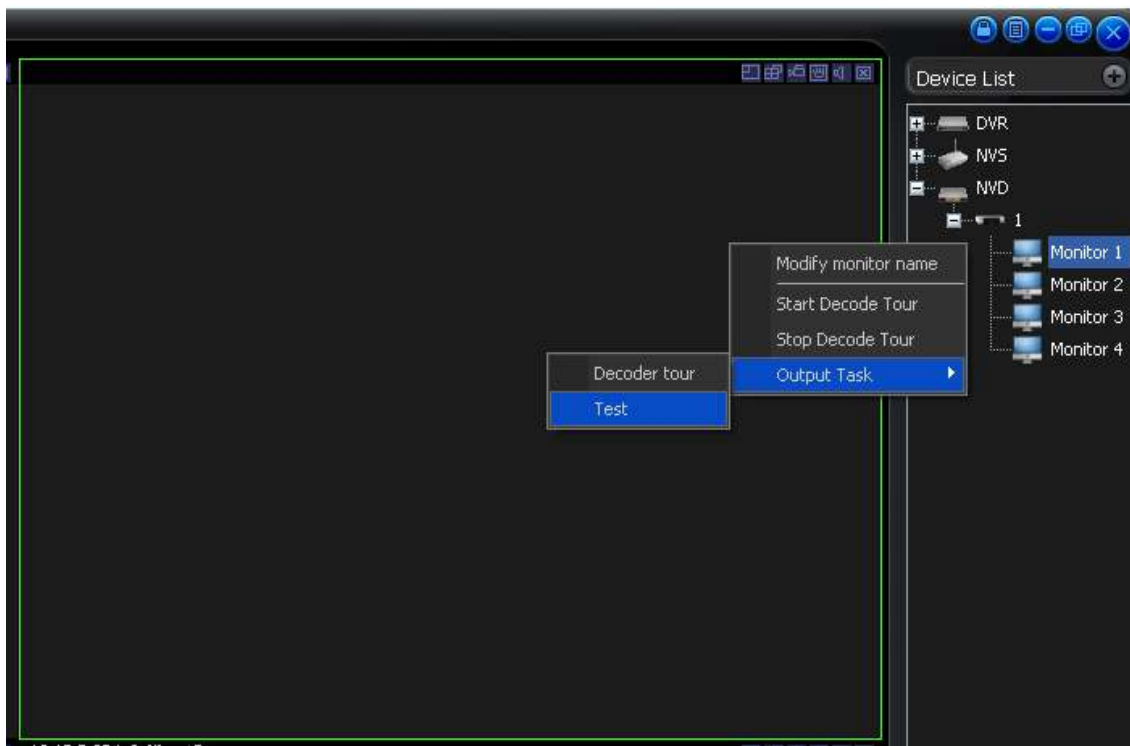


Figure 3-47

TV adjust

Click TV adjust button, the interface is shown as below. See Figure 3-48.

Please select a logged in NVD from the list on the left pane and then select a output channel from the TV output list on the right pane. When you are viewing the video of the output device the NVD connected to, you can use the control at the right bottom of the pane to adjust the video output window margin.

Important

Before operation, please make sure current NVD has logged in and the device supports TV adjust function. Otherwise you can not see the following interface.

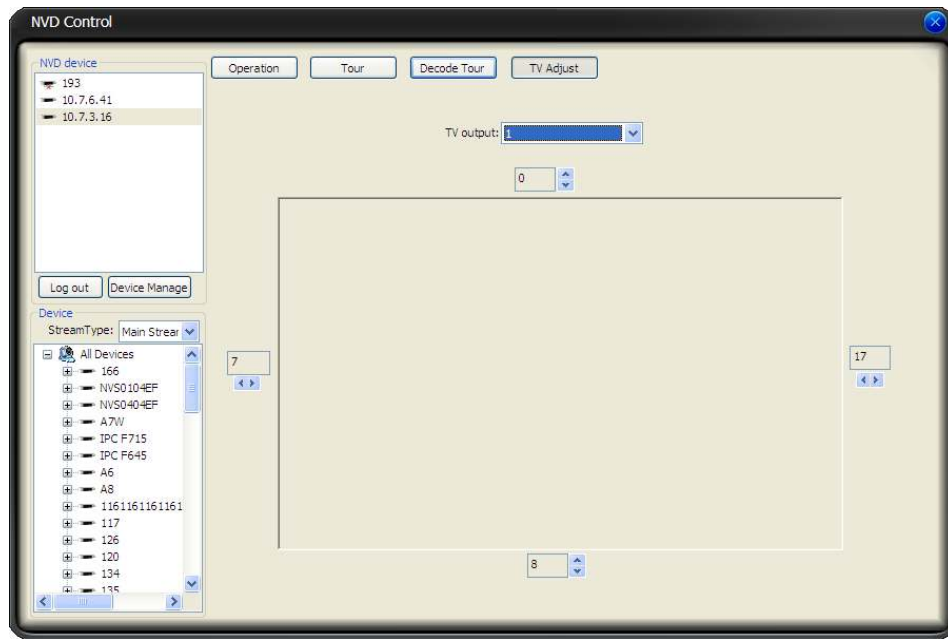


Figure 3-48

3.8.4.3 Health Report

Please note, you need to go to chapter 3.7.5.2 Option to check the “Get all devices health report enable”. Otherwise you can not see the following interface.

Health report interface is shown as below. See Figure 3-49.

There are four sections.

- Section1: Detail running information of all devices.
- Section2: Once you enable auto refresh function, system can auto update list regularly.
- Section3
- ✧ Refresh: Click refresh button to view latest running status.
- ✧ Export: click it to export current running status to the specified file.
- Section4: Record status icon samples.

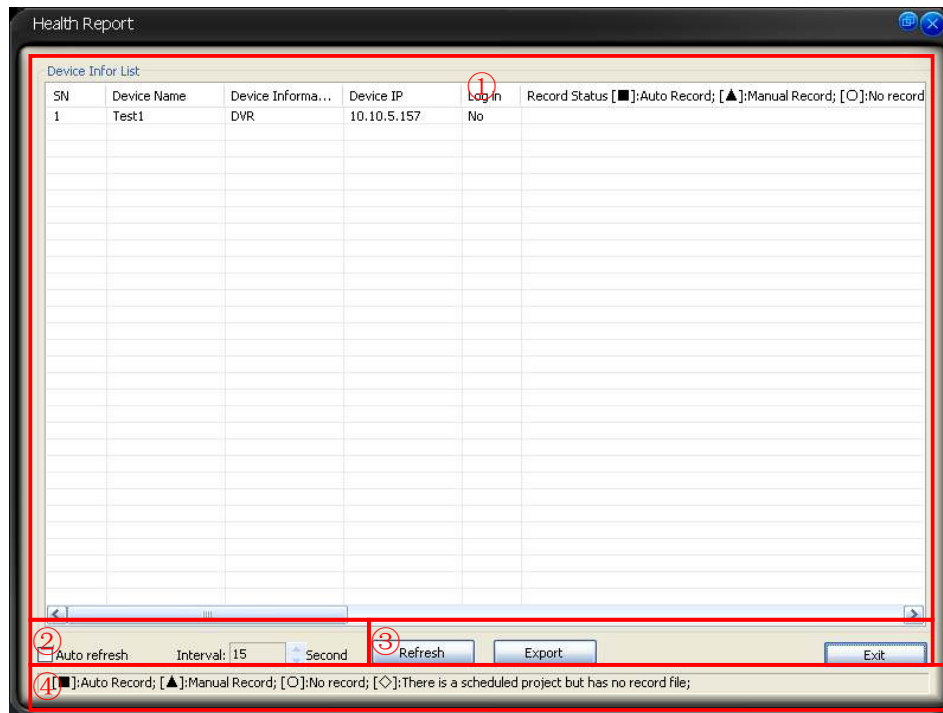


Figure 3-49

3.8.4.4 Log Search

System displays the log information according to the filter (such as user, time, type and etc.) you set. See Figure 3-50. There are max 1000 logs in one page.

- User: Select the user name here. Please note admin can select log of all users while the ordinary user can only search its own log.
- Date: Here you can specify the log date.
- Log type tree: Here you can select the log type you want to view.
- Export: Click you can specify the path to save the log files to your local PC.
- Previous page: Click it to view the previous 1000 logs.
- Next page: Click it to view the next 1000 logs.
- Cancel: Click it to exit log search interface.

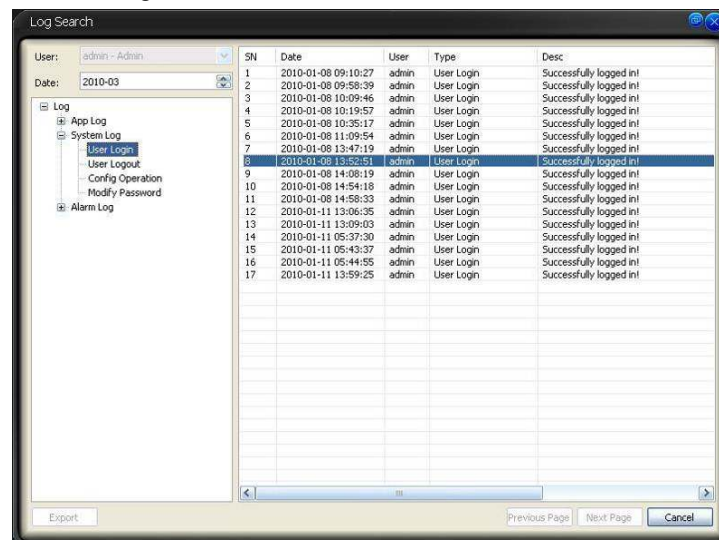


Figure 3-50

3.8.4.5 Alarm Link Video (Alarm Activation Video)

Please note the following interface is a pop-up window to display the alarm activation video. See Figure 3-51.

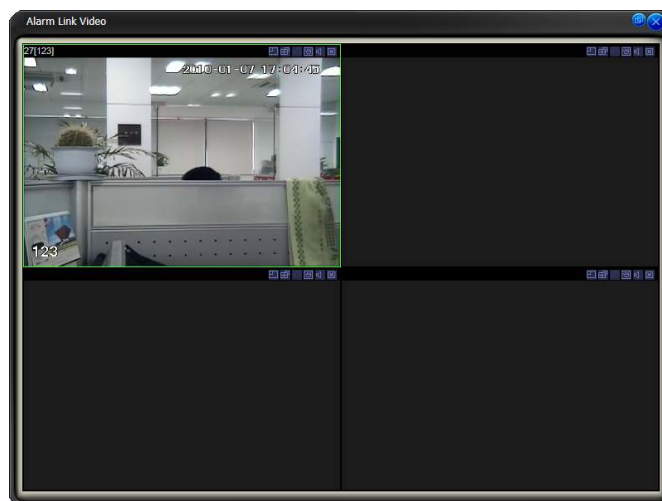
 


Figure 3-51

Please go to chapter 3.7.5.2 Option to enable this function and set the corresponding window amount.

See



The alarm activation video will be displayed in the pop-up small window one by one. If there is no idle window, the new alarm activated video will replace the previous one.

You can see the following interface if there is displayed activated video. See Figure 3-52.

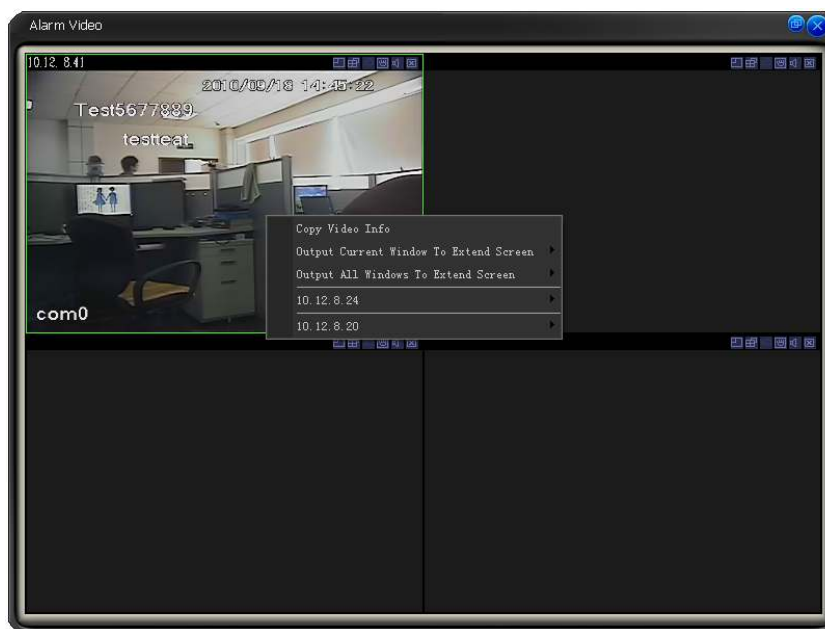


Figure 3-52

- Copy video information: Click copy video information button first, then go to the main window and NVD control interface and right click mouse. Now you can see there is an option allows you to paste video information button. Select the paste video information; you can see the alarm activation video in the corresponding window.
- Output current window to the extension screen: There are several extension screen names. You can click the corresponding name to output the current window to the specified extension screen. (**Important:** Please make sure you have added the extension screen, otherwise you can not see this item.)
- Output all windows to the extension screen: There are several extension screen names. You can click to output all windows to the specified extension screen. (**Important:** Please make sure you have added the extension screen, otherwise you can not see this item.)
- 10.12.8.24 and 10.12.8.20 (The IP address here is for example only. Please make sure you have connected to the decoder or the SNVD, otherwise you can not see the corresponding item.): These are the decoder and SNVD name that has logged in. You can select the connected screen name of the corresponding device from the dropdown list to output the alarm activation video to the specified screen.

3.8.4.6 Alarm Output Control

Click the alarm output control button, the interface is shown as in Figure 3-53.

Here you can enable or disable the alarm output ports of all logged in devices.



Figure 3-53

3.8.4.7 Color Configuration

Color setup interface is shown as in Figure 3-54.

Here you can adjust the brightness, contrast, saturation, hue of the specified window in the main interface.

You can click default button to restore default color setup.



Figure 3-54

3.8.4.8 Volume

The volume interface is shown as in Figure 3-55.

There are three function buttons:

Sound box volume control, microphone volume control and close alarm audio.

Close alarm sound function is to disable sound when there is device alarm.



Figure 3-55

3.8.5 Setting Manage

Setting manage menu is shown as below. See Figure 3-56.

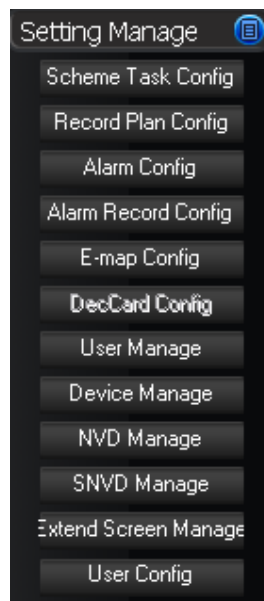


Figure 3-56

3.8.5.1 Scheme and Task (Task and Project)

Monitor task is a series operation to open the video. If current camera supports PTZ, then system can go to specified preset.

Monitor project: It consists of several tasks.

Please note you need to create task first and then create a project.

In the task list column, you can view all configured task names.

In monitor item column, you can view the detailed information of selected task.

Please note, when system is in modification mode, you can not modify the task name.

Task

Task interface is shown as in Figure 3-57.

- Task list: Here you can view task name. Select one name, you can view corresponding information on the right side.
- New: Click it you can see an interface is shown as in Figure 3-58. Here you can create a new task.
- Modify: Modification interface is shown as in Figure 3-58. Please note you can not edit task name.
- Delete: You can click it to remove one task.
- Import: You can import task from specified XML file.
- Export: You can export current task to a XML file.

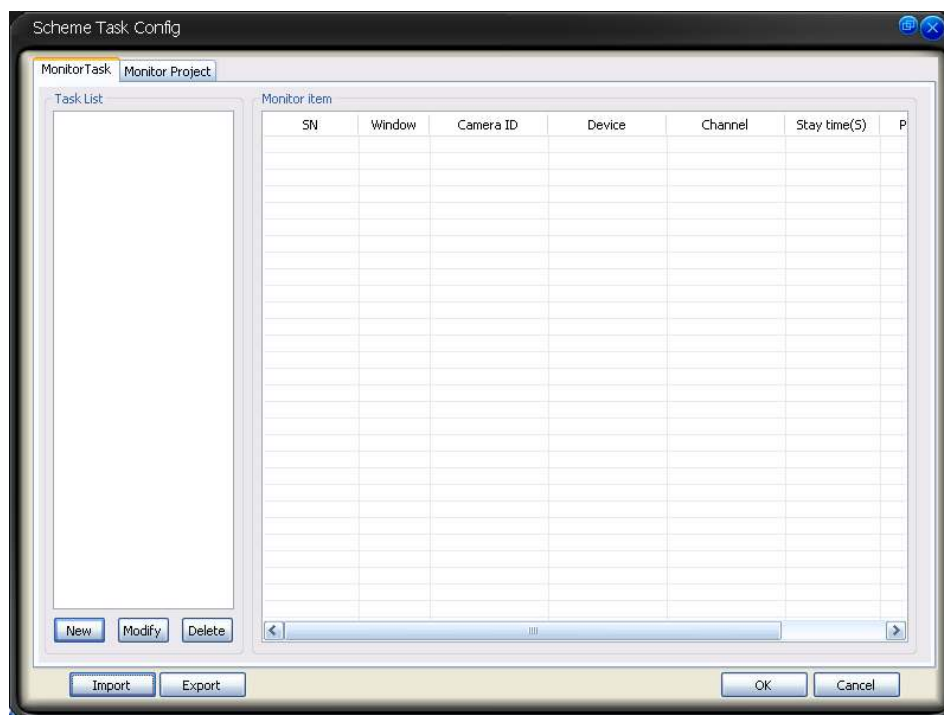


Figure 3-57

Task edit interface is shown as in Figure 3-58.

- Task Name: Please input task name here if you want to create a new task. Please note, if you are going to edit the task. You can not modify the name.
- Window amount: Here you can input the window amount you want to see in the monitor interface when you enabled current task.
- Window: Window serial number. It means the current monitor item is in which window.
- Camera name (can not be modified.) and camera ID: You can drag the channel name in the device list section to the current column.
- Stay time(s): You can input stay value here.
- Preset: When you open the monitor, system can go to the specified preset. The default preset value is N/A
- Bit stream type: if device supports extra stream, you can set the bit stream when open the video.
- Monitor item: Here you can view task detail information. System begins task from number 1 to number 2 and then go on. You can use Up/Down button to adjust the monitor task sequence.

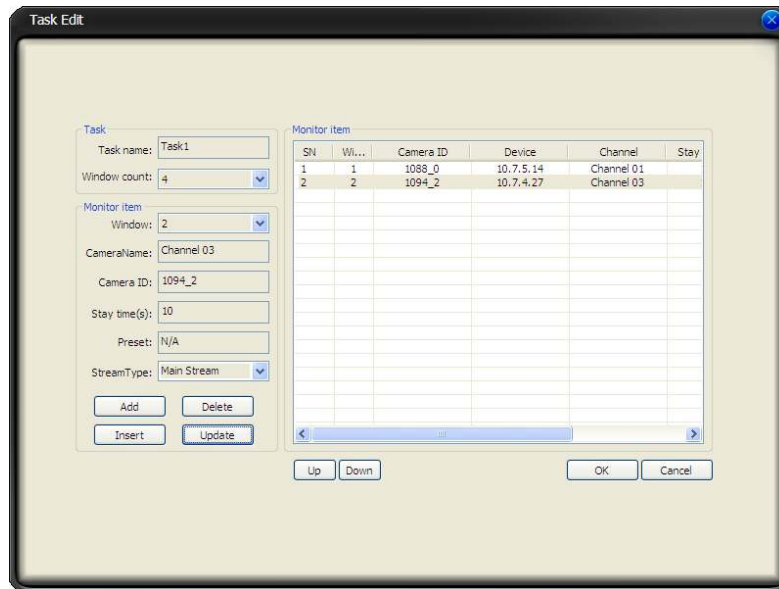


Figure 3-58

Project

Monitor project interface is shown as in Figure 3-59.

- Project list: Here you can view all set project names.
- Project item: Here you can view selected task detailed information.
- New: Click it you can see an interface is shown as in Figure 3-60. Here you can create a new project.
- Modify: Modification interface is shown as in Figure 3-60. Please note you can not edit project name.
- Delete: You can click it to remove one project.
- Import: Import the saved project XML file to current list.
- Export: Export current project list to specified xml file.

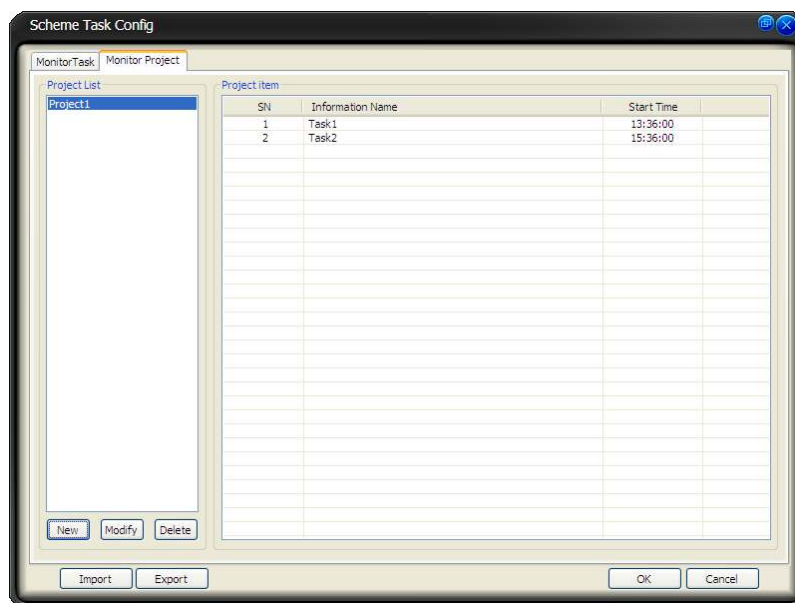


Figure 3-59

Click modify button, the interface is shown as in Figure 3-60.

Please note, in modification mode, you can not modify project name.

- Monitor project mode: It includes two modes: schedule mode and tour mode.
 - ✧ Schedule mode: In this mode, the monitor task will begin activated in the time you specified.
 - ✧ Tour mode: In this mode, you can specify the monitor task interval time. The system will begin the task one by one according to the period you specified and in accordance with the sequence you arranged. System will repeat the procedure again and again once it completed the last task.
- Task name: Please select the task to be run.
- Start time: Please select the task start time (For schedule mode only).
- Interval: please select the task running time (For tour schedule mode only).
- Up and down button is to adjust the monitor task sequence.

Please click save button to exit.

SN	Task Name	Start Time
1	1	08:00:00
2	1	07:00:00
3	1	09:00:00

Figure 3-60

3.8.5.2 Record Plan Configuration

The record manage interface is shown as below. See Figure 3-61.

- Pack duration (m): System can generate a recorded file when record plan is running. You can input pack duration here.
- Record plan list: The record schedule in the record plan.

In the below, you can view the valid record period of current camera.

Double click time bar or the list column, you can modify schedule period for current camera.

Please note, if you want to modify the plan, you can not modify the device information and channel information

At the bottom of the interface, the green period means there is record plan in the specified time.

Double click it to see the record plan edit interface.

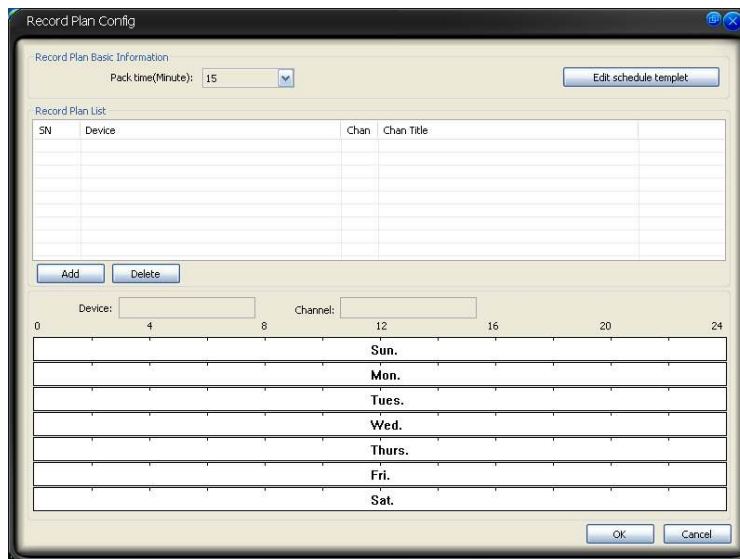


Figure 3-61

Edit Schedule Template

In Figure 3-61, click edit schedule template, you can see an interface is shown as below. See Figure 3-62.

You can select schedule template here. Please note you can not modify or remove empty template/all day template.

You can view detail template information on the left side.

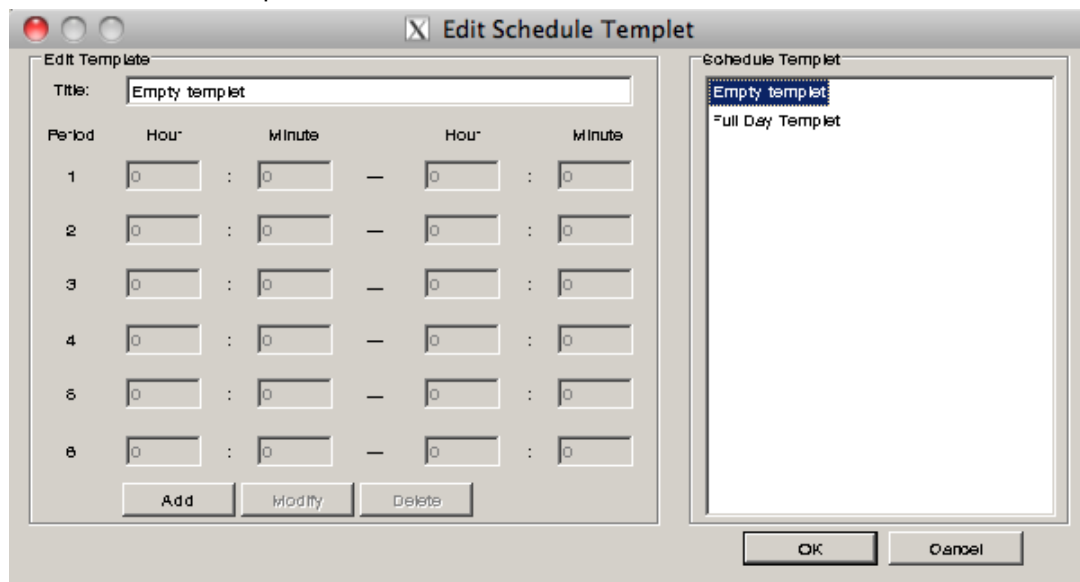


Figure 3-62

In Figure 3-61, click add button, the interface is shown as in Figure 3-63.

- Device: You can select from the dropdown list.
- Channel: You can select from the dropdown list.
- "<-one week" is to apply the selected schedule setup to the whole week.
- "<-" is to apply the selected schedule to the corresponding date(Sun to Sat.)

You can select one template on the right and then click edit schedule template button to modify it.

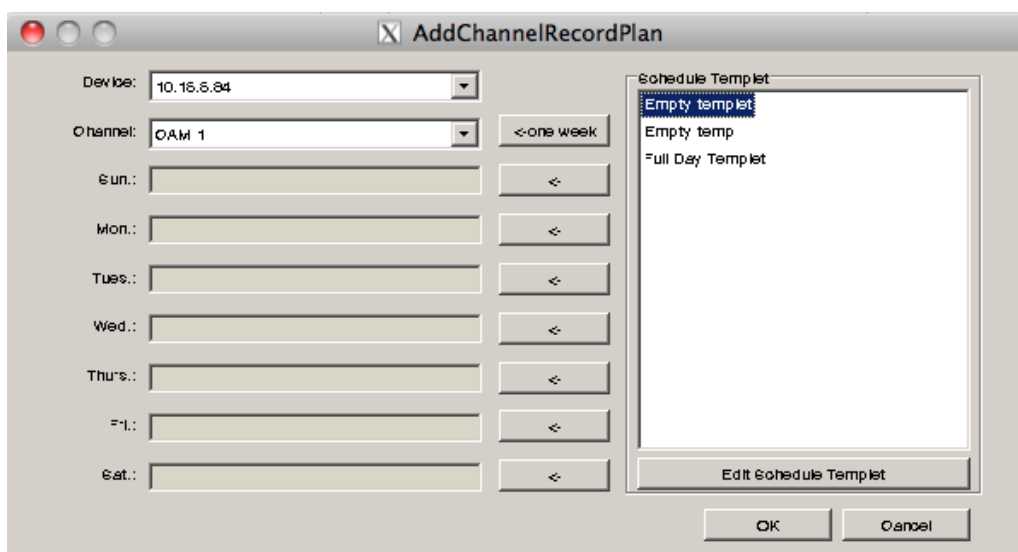


Figure 3-63

3.8.5.3 Alarm Manage

Here you can set corresponding alarm setup. It includes four interfaces.

- Global configuration: Here you can set detailed arm information such as enable/disable audio, add the alarm to the alarm record and etc.
- Arm/disarm: Here you can enable/disable arm according to the alarm type or the device channel.
- Activation Strategy: Here you can set activation operations in the corresponding window when the specified alarm occurs in one channel.
- Alarm information output:: Here is to output various alarm information to display.

You can go to chapter 3.7.5.2 Option to set the max alarm record amount. See Figure 3-64.

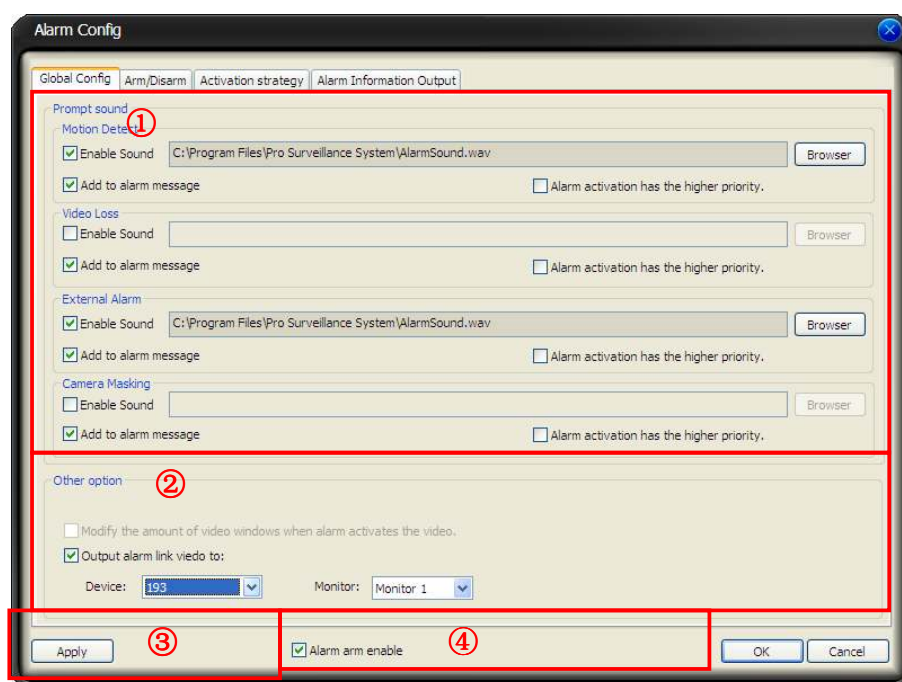


Figure 3-64

Global Configuration


Global Configuration interface is shown as in Figure 3-64.

Section 1


- Enable sound: Please draw a circle to enable sound function and then click browser button to select corresponding sound file.
- Add to alarm manage: Display in alarm information window: You can enable this function to add alarm message to alarm record window (Chapter 3.7.2 Alarm).
- Alarm activation has the higher priority: Please note once there is new alarm, alarm activation video will be switched to display the new one no matter the previous alarm display interval is over or not. You can check the box to enable current function.

Section 2 Other option

- Modify the amount of the video window when alarm activates the video: When the alarm activation window index is more than the monitor window amount, system cam automatically change the window amount to display the activation video. Please note this function is

invalid if you have checked the box  **Use pop-up window to display the alarm video.** in chapter 3.7.5.2 Option.

- Output alarm activation video to: This function allows you to output the alarm activation video to the specified output device (besides display in the PSS interface). Please check the box to enable this function first. Then you can select a device(NVD/SNVD) and monitor from the dropdown list respectively. Please make sure you have enabled

 **Use pop-up window to display the alarm video.** in chapter 3.7.5.2 Option., otherwise this function is disabled.

Section 3

- Apply: Click it to apply current setup.

Section 4

- Alarm arm enable: You can enable this function to use alarm setup. Otherwise the alarm setup is null.

Arm/Disarm

Arm/disarm interface is shown as in Figure 3-65.

Section 1: You can see arm has four types: Motion detection/video loss/Camera masking/External alarm.

Section 2: Here you can set the alarm arm to the corresponding channel. You need to check the box to enable the function; otherwise you can not see the corresponding operation you set in Global configuration

You can select corresponding setup to the specified channel.

Section 3: Apply: Click it to apply current setup.

Section 4: Alarm arm enable: You can enable this function to use alarm setup. Otherwise the alarm setup is null.

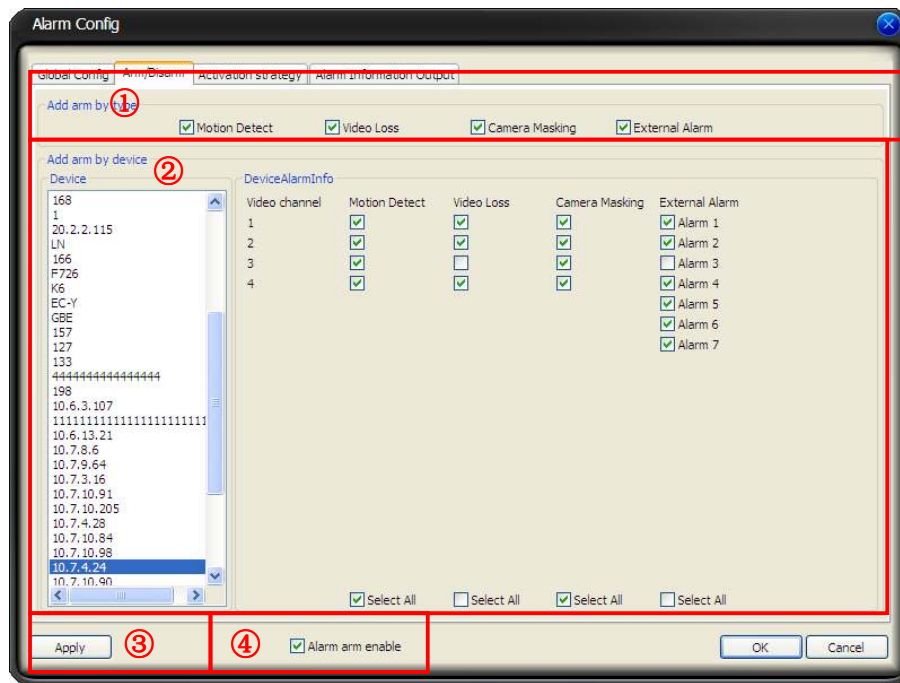


Figure 3-65


Activation Strategy

Activation interface is shown as below. See Figure 3-66.

Section 1

- Alarm device: In the alarm device list, you can view the alarm sourcing device. You can set several activation operations for one alarm sourcing device. For example, the camera can generates the motion detect, video loss, camera masking alarm. The alarm device can generate the external alarm.

Section 2

- Type: You can select the activated alarm type from the dropdown list.
- Resume previous video after alarm ended: The activation alarm can open the video in the specified window. The video stays for the specified time and then restore previous video.
- Display alarm prompt in the video window: The icon  pops in current alarm window when alarm occurs. (On the top left).

Section 3

- Channel: You can select the activated channel when alarm occurs.
- Window: You can select the monitor window serial number. The activated channel video will be displayed in the specified window.
- Stay time(s): The activated video duration.
- Preset: If current channel connected to the PTZ, and you have set the preset, then system can go to the specified preset once alarm occurs.

Section 4

Here you can view current existed actions. It is the alarm activation list of the channel of the device you selected.

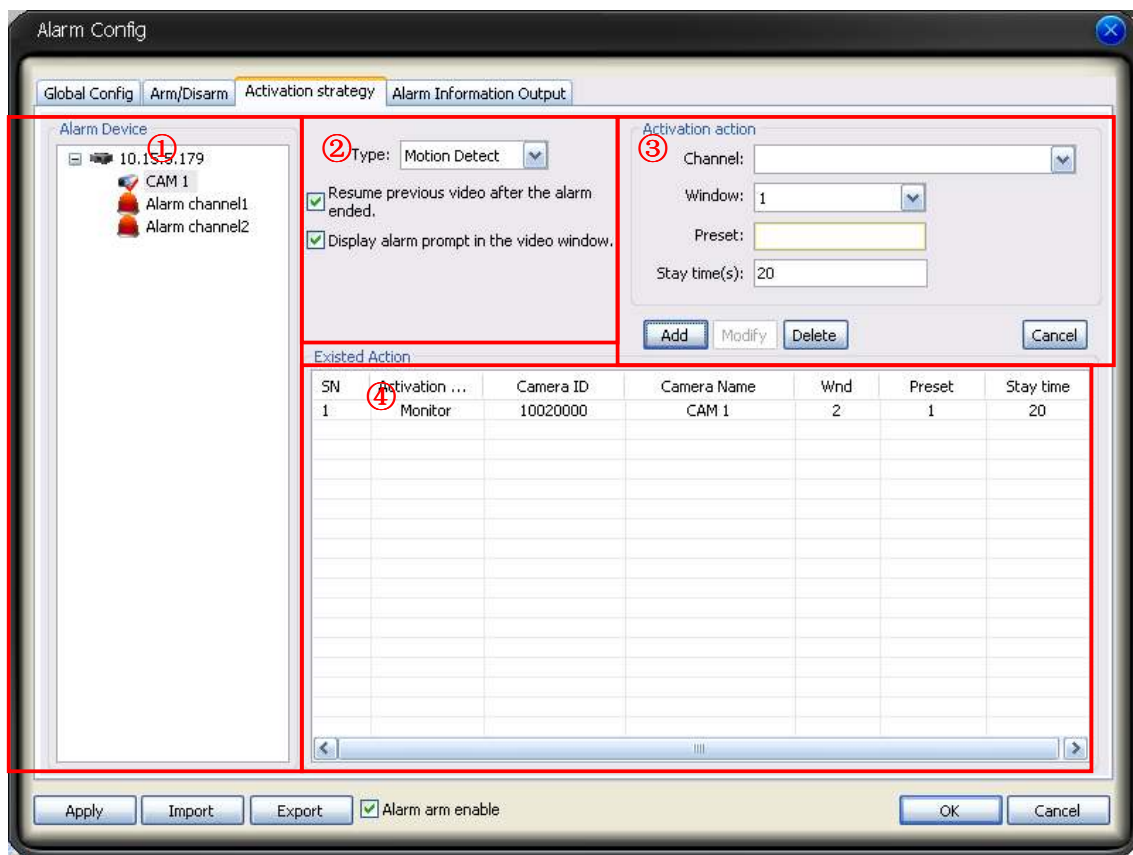
 


Figure 3-66

Alarm Information Output

The alarm information output interface is shown as below. See Figure 3-67.

- Alarm information tree: Here you can view the alarm sources of all devices.
- Additional information: Here you can set the additional information when output the alarm information. It is very useful for the peripheral devices to recognize and process the alarm.
- Add: After you selected the alarm source(s) on the left panel, you can click the add butt to add the alarm source(s). Please note when you add multiple alarm sources at the same time, the additional information is the same.
- Existed action: You can view alarm source setup here. You can check the device and set the additional information, click the add button, you can see the corresponding action here.
- Delete: After you selected an item (or items) in the existed action panel, you can remove the setup from the list.
- Alarm information output rule: Here you can set the string format of the alarm information.

Click the button , the interface is shown as in Figure 3-68. Usually we recommend the name such as device name+channel name+alarm information. The record type here is invalid since it is the alarm type.

- Enable other alarm type information output: Once you checked the box here, all the other alarms (such as HDD alarm) will be output to the peripheral applications.
- Additional information for other alarm type information: Here you can set the additional information for the other alarm type.

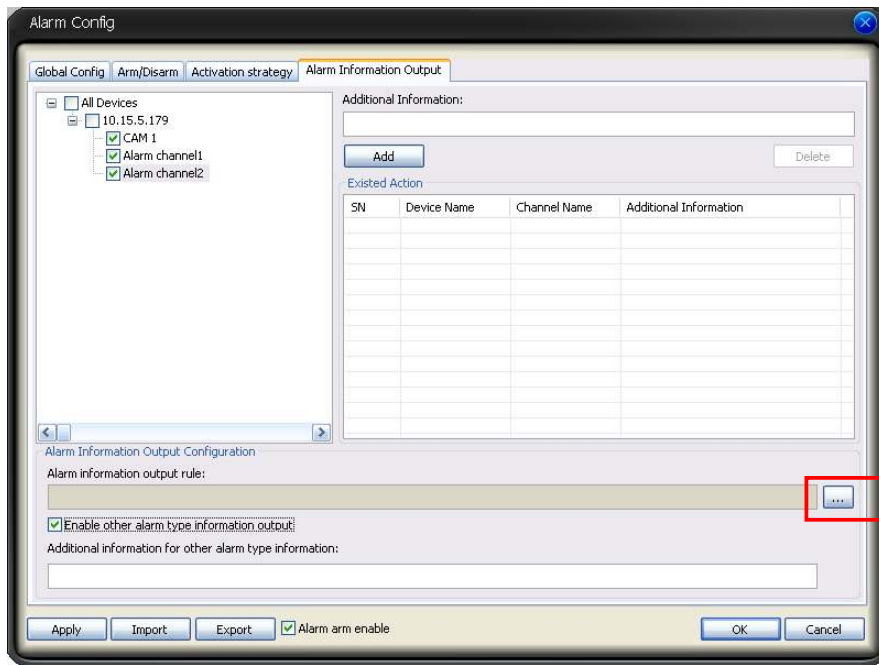


Figure 3-67

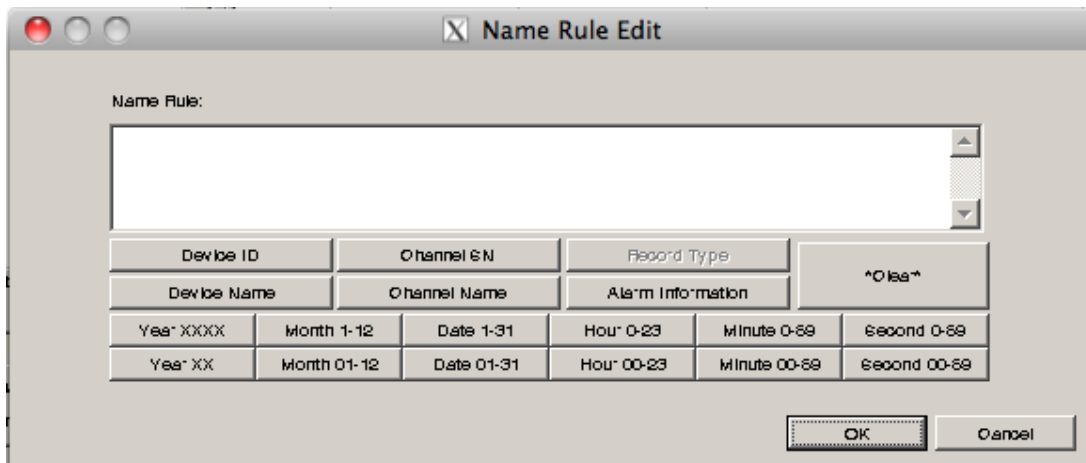


Figure 3-68

3.8.5.4 Alarm Record Plan

Alarm record plan interface is shown as in Figure 3-69.

Here you can set various alarm activation records for the same arm period. You can use the schedule template to set conveniently. You can view there is a circle for the selected channel. Please go to playback interface to search the alarm record (chapter 3.7.3 Playback-linkage record.). You can see there is a red cross below the corresponding channel name if there is activation operation.

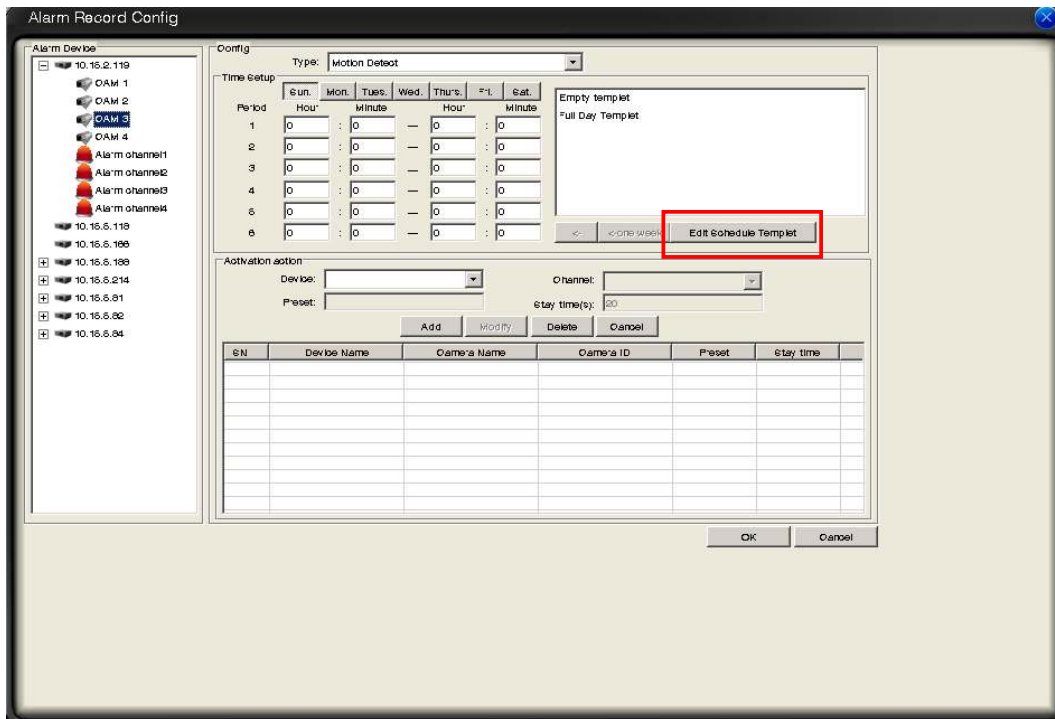


Figure 3-69

The schedule templet interface is shown as in Figure 3-70.

- Title: Please input a templet name here.
- Period: There are six periods in one day (00:00). The start time shall be earlier than the end time.
- Add: Add current time templet to the time templet list on the right pane.
- Modify: Modify selected time templet.
- Delete: Remove the time templet from the list.

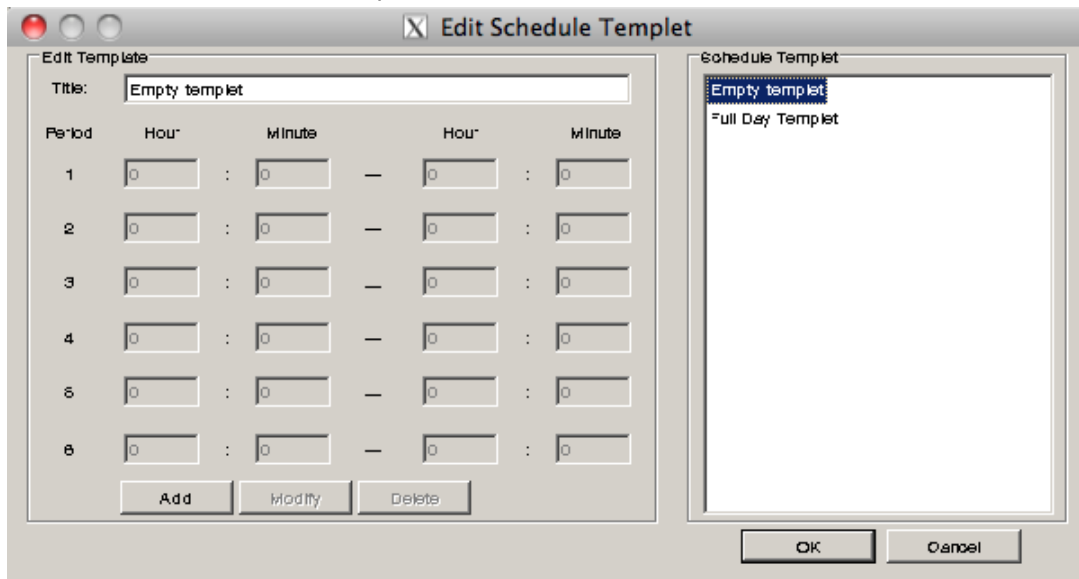


Figure 3-70

3.8.5.5 E-map

System provides three modes to display E-map node: Thumbnail /Device tree/E-map.
If it is you first to use e-map, you need to create one first. Please refer to chapter 3.7.5.2 Option for e-map loading path.

The e-map interface is shown as below. See Figure 3-71.

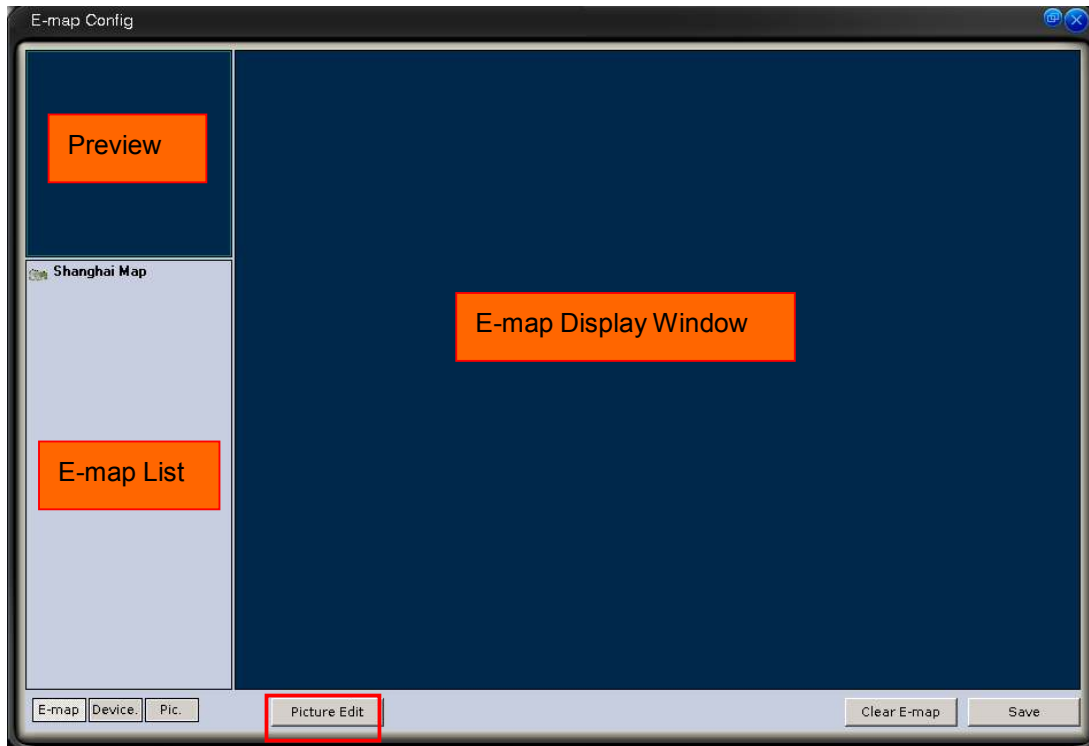


Figure 3-71

In Figure 3-71, click picture edit button, you can see the following interface. See Figure 3-72.

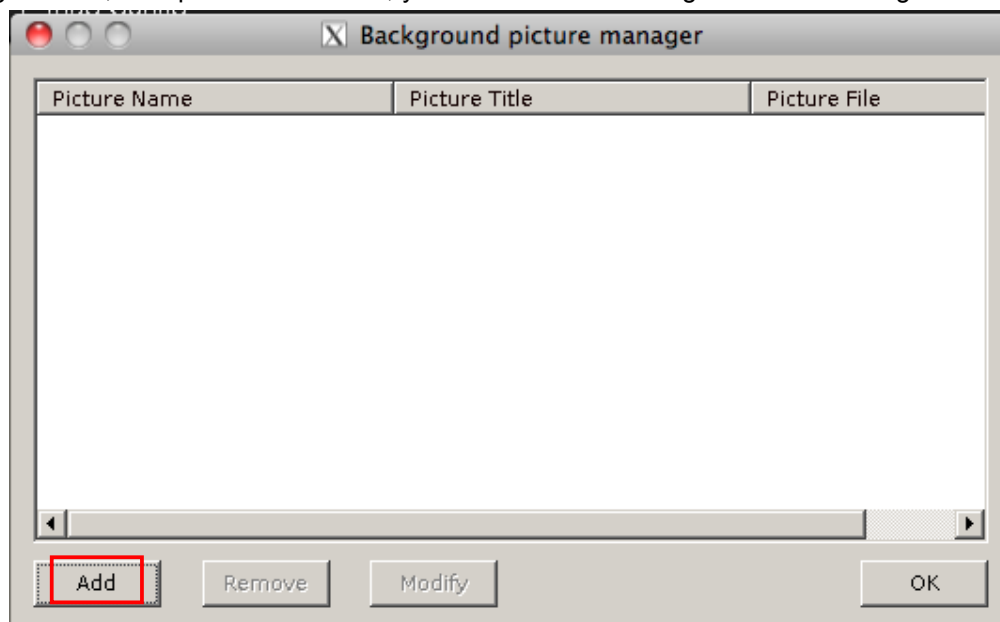


Figure 3-72

Click add button, you can see an interface is shown as in Figure 3-73. Here you can input picture name (such as Shanghai Map), picture description and then select picture path. Please click OK button to save current setup.

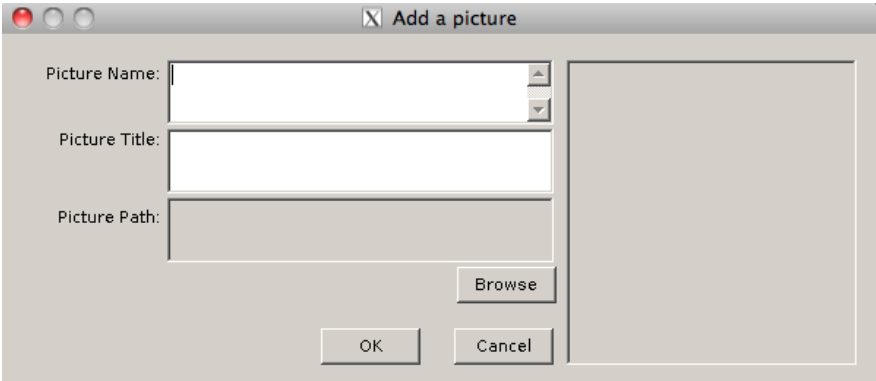


Figure 3-73

After you completed the above steps, the interface is shown as below. See Figure 3-74. Please click OK to exit.

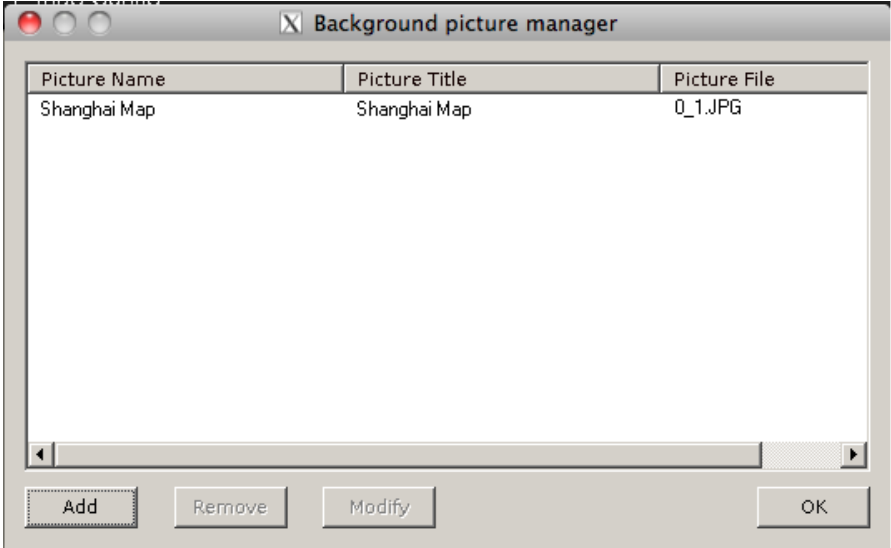


Figure 3-74

Now please click picture button, then you can see you have added an e-map. See Figure 3-75.

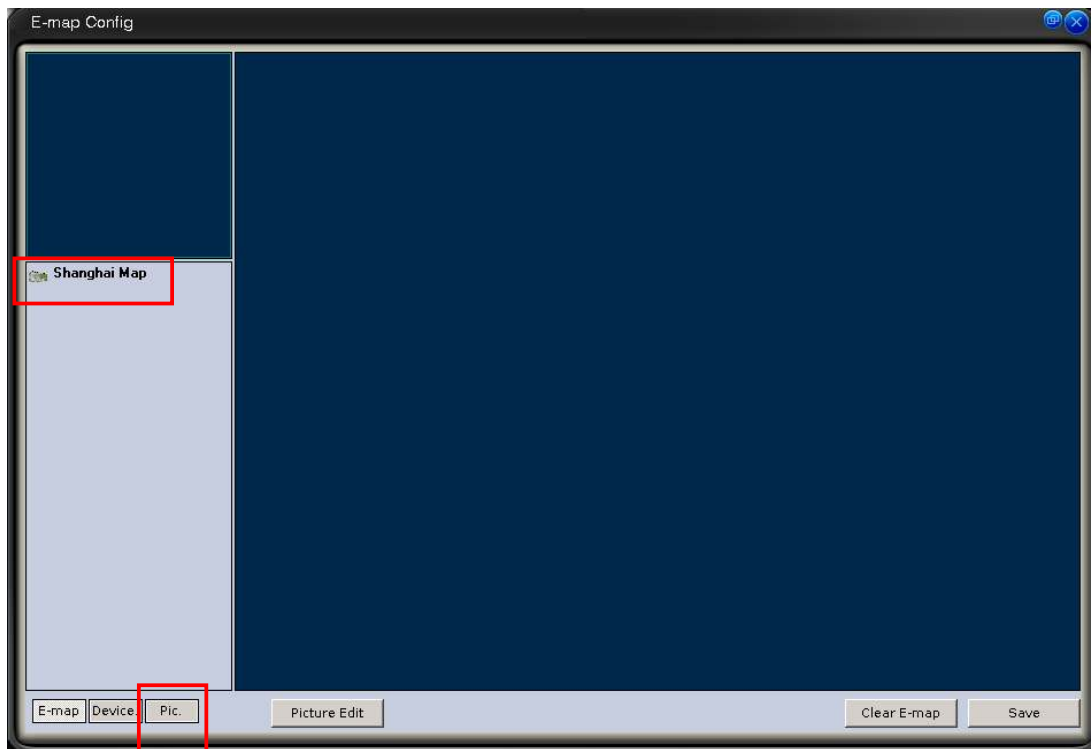


Figure 3-75

In Figure 3-75, left click e-map name and then drag it to the display section. Now you can see an interface is shown as in Figure 3-76.

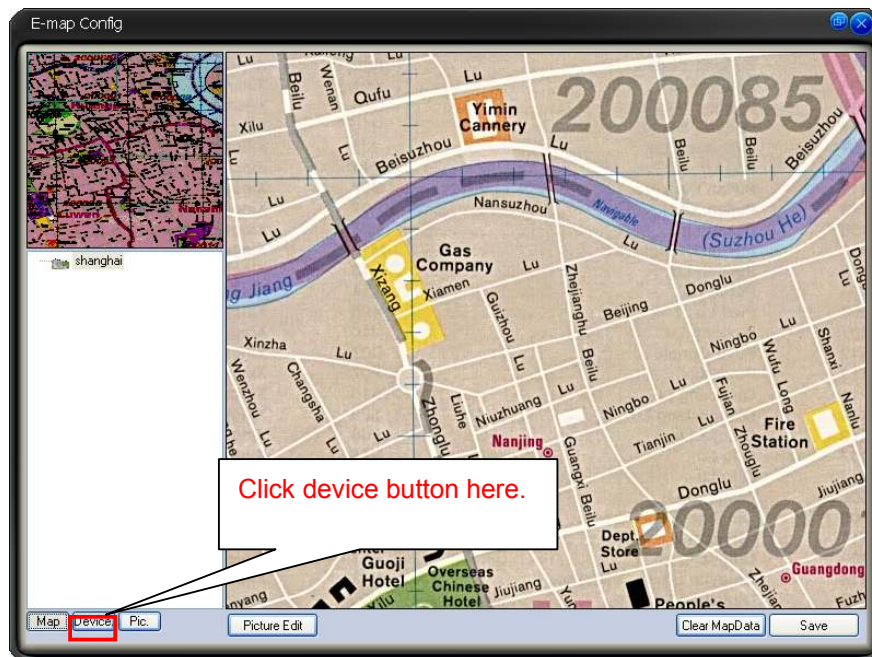


Figure 3-76

In Figure 3-76 click device button, and then drag the channel number to the e-map and then release. You can see the following interface. See Figure 3-77.
You can see you have added a camera in the e-map (CAM4)

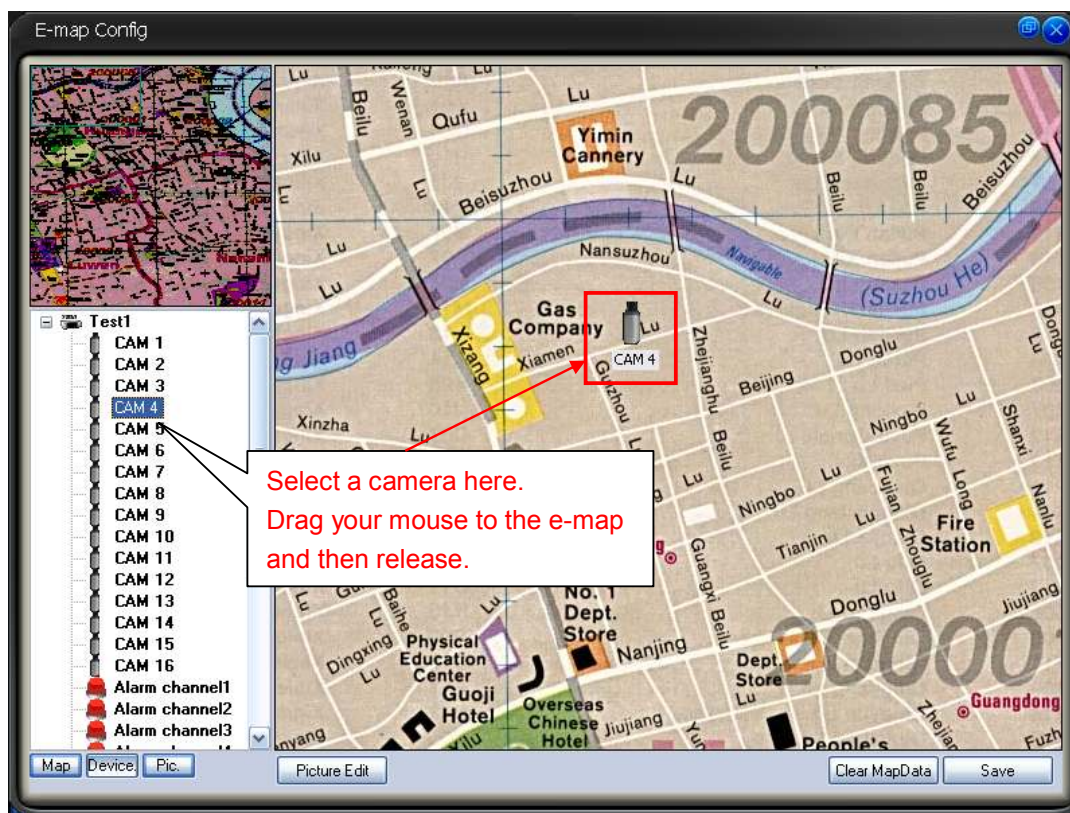


Figure 3-77

Click clear map button, system pops up a dialogue interface. See Figure 3-78.
Click Yes button to remove current e-map.



Figure 3-78

Tip:

Move the green rectangle icon in the preview section; you can view different e-map content in display section.

You can repeat the above procedures to add a sub-map.

If you want to implement multiple sub-e-maps setup, you can follow the procedures below:

- Open one map such as map1.
- Click picture button and drag map 2 to anywhere in map1.
- Click map button and click map 2 to open current map
- Double click device name on your right side to add one device to map 2.
- You can view newly added e-map and device list in the map list section.
- Click save button, now you have added one sub-map and its device.

Please note, you can not use remove or modify the E-map that you set to use right now.

Camera Property

Right click the camera in the e-map, you can view there are three options: Edit property/property/remove.

Click property button, you can see an interface is shown as in Figure 3-79.

- ID: Camera ID.
- Title: Camera description information
- Type: Camera type.
- Channel: The channel serial number in the device.
- Direction: This item is for general camera. It can be modified. IPC, speed dome and alarm device do not have this item.

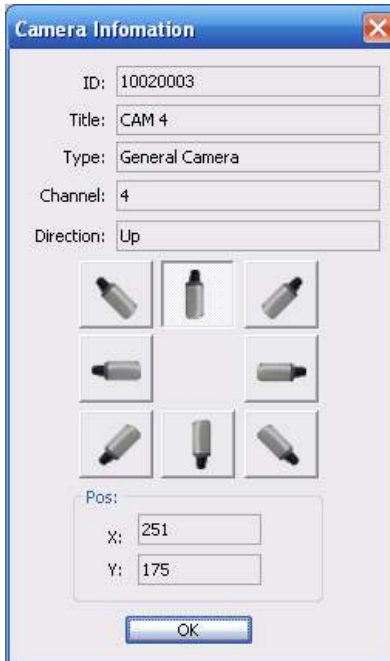


Figure 3-79

Right Mouse Menu

In the e-map or at the e-map no, right click mouse you can see there are some items:

- Edit property: System pops up the property dialogue box. It applies to general camera and the e-map node only.
- Property: system pops up property interface. It is for reference only, you can not modify.
- Remove: Click it to remove the node from current E-map setup.
- Go to sub-e-map: If current e-map is the parent e-map. Select this item you can go to the sub-e-map. Current display window shows the sub-e-map content.
- Go parent: If system is showing sub-e-map content, you can select it to go to parent e-map. Click it, the parent-e-map is displayed in current window

3.8.5.6 Decode Card Configuration

The decode card is one of our series products. The decode card can greatly reduce CPU resources.

Before setup, please makes sure you have installed encode card, and you have enabled the “loading decode card when PSS booted up” in the configuration interface. Please refer to chapter 3.7.5.2 Option for detail information..

The decode card manage interface is shown as in Figure 3-81.

You can see there are five sections.

Please refer to the following sheet for detail information.

SN	Item	Function
1	Window SN	The video displayed window serial number.
	Area mode	Display window split mode. (The drop down list may vary according to the different decode card series.) See Figure 3-80.
2	Display channel	It is a decode card TV output serial number.
	Binding	Binding decode card TV output serial number and PC video displayed window.
	TV/VGA	There are two options. You can output to the TV device or VGA device.
3	Output video offset	When decode card is output, sometimes the image may offset. Please adjust the left and right limit to locate it in the middle. The pan value ranges from 0 to 800 and the tile value ranges from 0 to 600.
4	Decode card binding information list	This interface is for reference only.
5	Brightness	You can adjust decode card bright value.

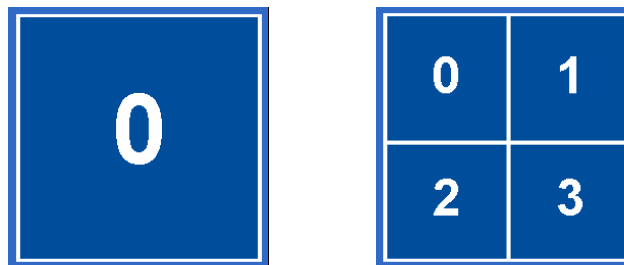


Figure 3-80

Important

The limit setup and the brightness setup become active immediately!

You need to reboot to view the binding setup.

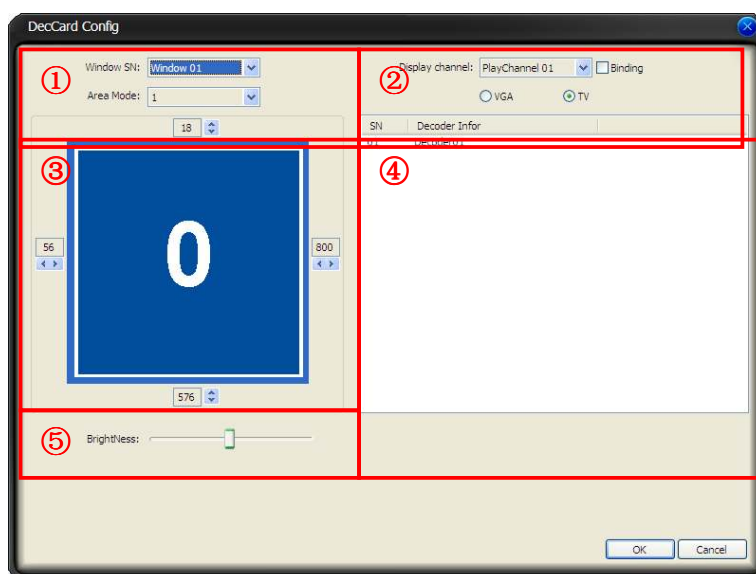


Figure 3-81

3.8.5.7 User Management

Important

Only the admin can go to the following interface.

User manage interface is shown as below. See Figure 3-82.

- User information list Here you can view all user information.
- ID: The account name you log in the PSS.
- Password: The password you input to log in.
- Confirm password: Please input password again to verify.
- Name: User name information or other.
- Sex: female or male.
- Information User note information.
- System path: Here you can specify use configuration save path.
- Right: You can draw a circle to enable corresponding information.

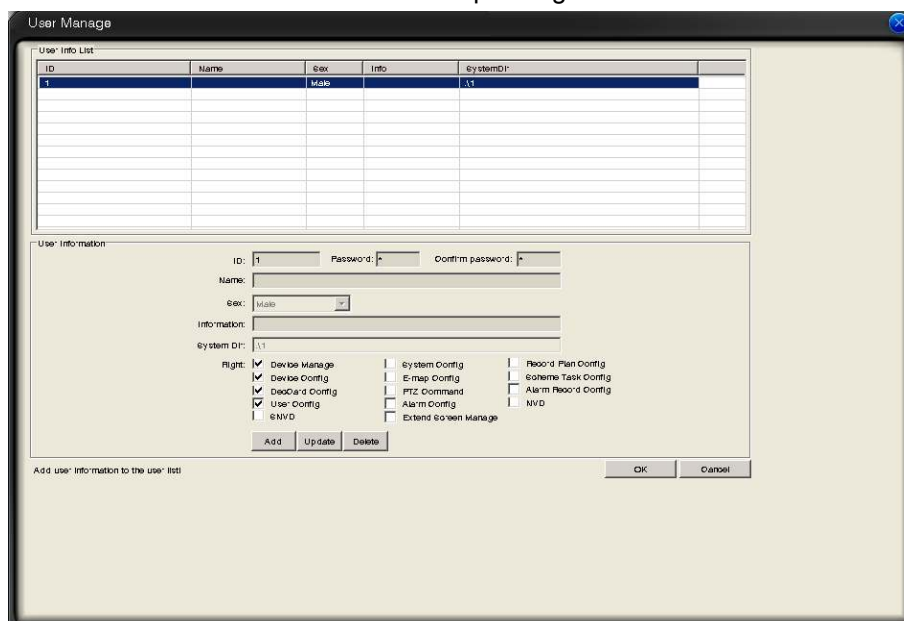


Figure 3-82

Device Manage

The device manage interface can be divided into two parts. The device information list part is shown as in Figure 3-83.

In the device information list, you can view the added device information.

You can select a user to see different devices since various users have different rights. Admin can view all devices.

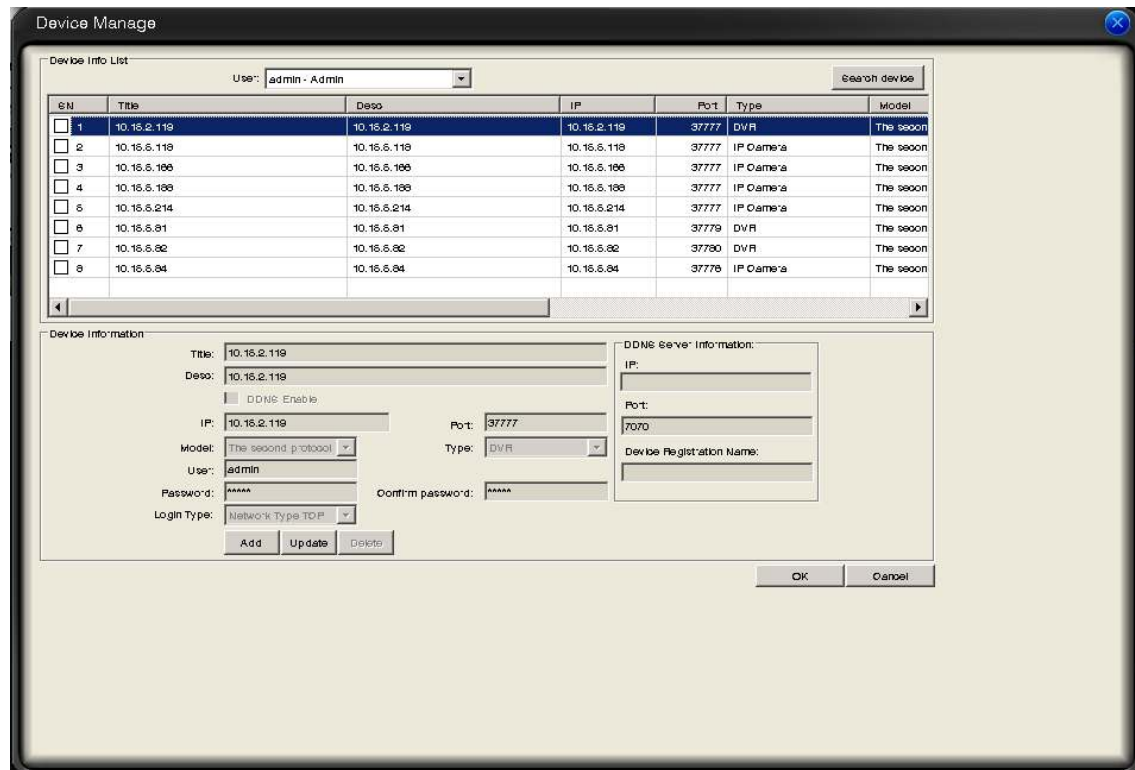


Figure 3-83

- Search device: You can click it to view all the devices available. See Figure 3-84. Please note if the device does not support search function, you can not view it in the list.

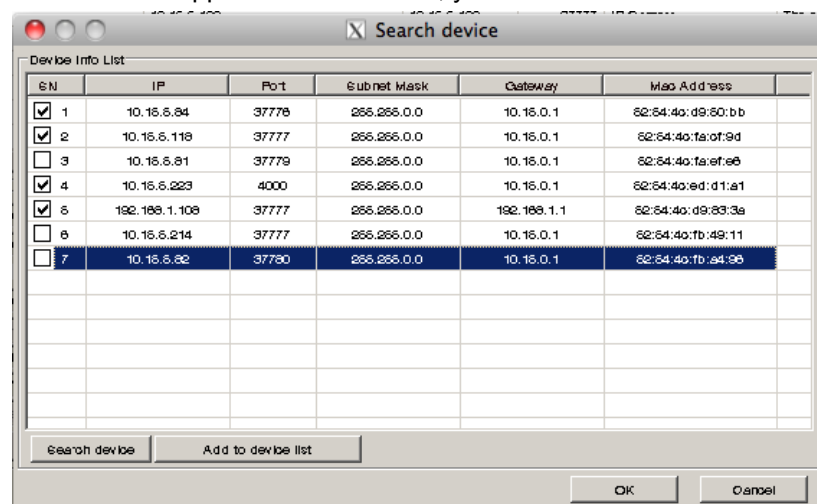


Figure 3-84

- Device information: When you select one device in the list, you can view and modify the detailed device information. See Figure 3-85.
- Please note, the user name, password in the following figure (Figure 3-85) are for you to log in the device. It has no relationship with the PSS. If you have enabled the automatically login function, you need to input the channel amount here.
- Card SN: It is for mobile DVR only. You need to input the card number if you have enabled the automatically login function.

Figure 3-85

About DDNS and IP address

If you enabled DDNS function, the IP address information is invalid. That is to say, Figure 3-86 and Figure 3-87 can not be active at the same time.

Please note, in Figure 3-86, you can input IP address such as 10.7.5.11 or you can input domain name such as www.yahoo.com.

Figure 3-86

Figure 3-87

3.8.5.8 NVD Manage

NVD manage interface is shown as in Figure 3-88.

Please refer to chapter 3.8.5.7 for operation information.

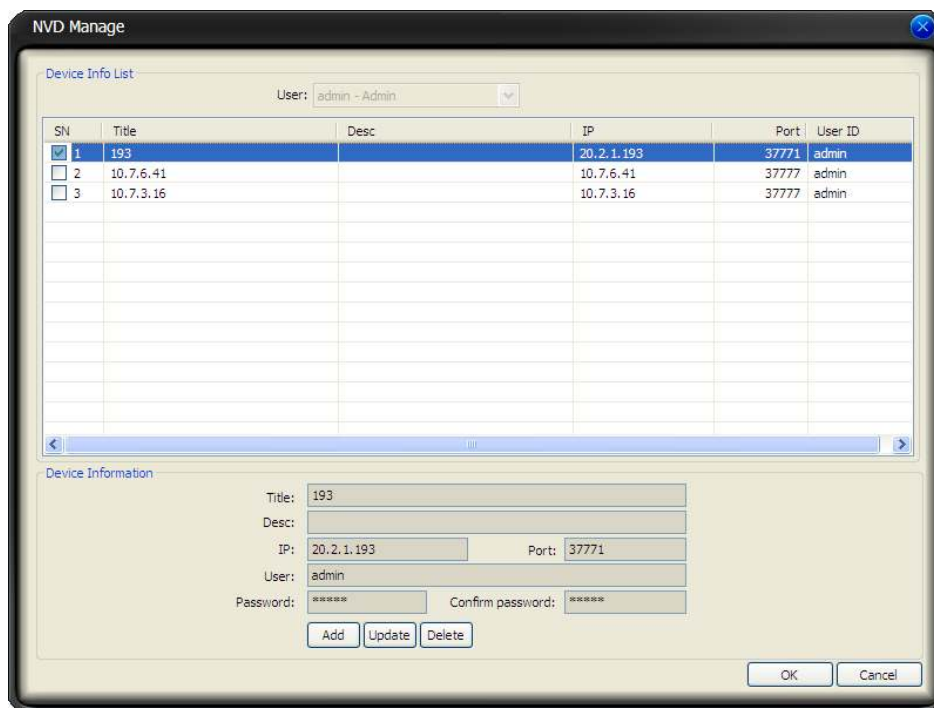


Figure 3-88

3.8.5.9 SNVD Manage

SNVD manage interface is shown as below. See Figure 3-89.

Please refer to chapter 3.8.5.10 for operation information.

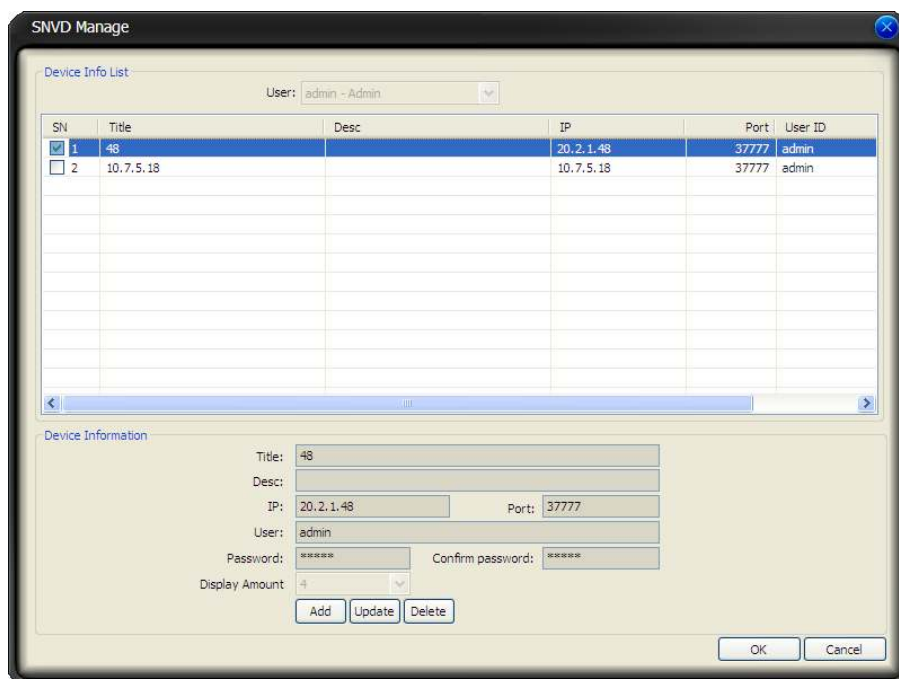


Figure 3-89

Important

User name and password here is for you to login the device. It has no relationship with our software operation!

3.8.5.10 Extension Screen

You can output your MAC interface to several monitors via multiple display cards or the display card supports several output ports. PSS can output the video interface to max four monitors, including one main monitor (display PSS main interface) and three extension monitors. The extension monitor can display the monitor task or project, or you can output one or several real-time monitor video to the extension monitor.

Before you use this function, please install the corresponding hardware first. You need to prepare the monitor and the display card needed. Please install the display card to the main board and then connect to each monitor. In Figure 3-91, there is a PC of three display cards and each card is of two output ports. So there are three display cards of six output ports. The highlighted number 1/2/3 stands for the output ports available, and the grey number 4/5/6 means the idle port (has not output the MAC interface to the monitors connected to these ports.). So there are three monitors connected to the PC.

After you properly install the hardware, you can boot up the PC and install the display card driver. Please click the apple key mouse on left top then select the SYSTEM MANAGER, here you can enter DISPLAY SETTING. You can see an interface shown as in Figure 3-91.

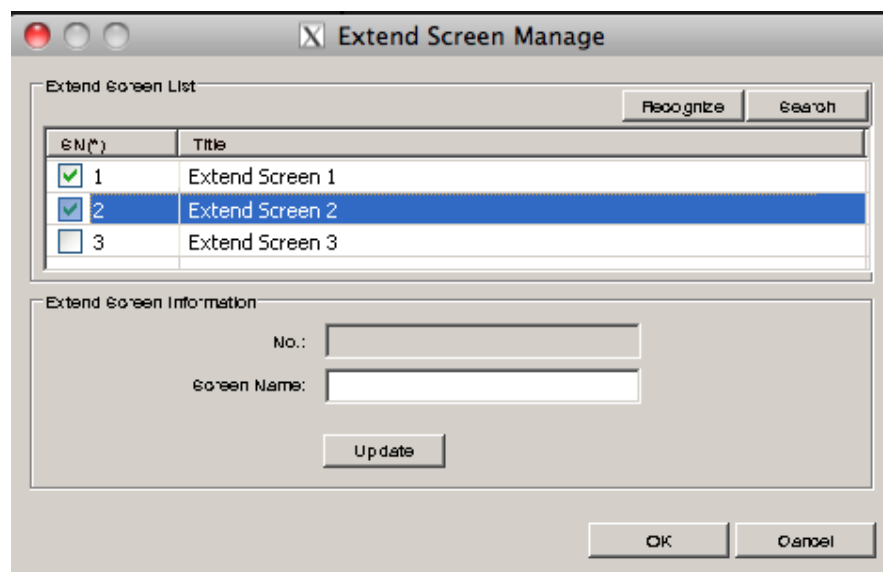


Figure 3-90

Important

Do not close the main screen after you completed the setup here. Otherwise the OS may change the desktop overlay automatically. Usually the screens shall be in successive sequence (recommended). See Figure 3-91.

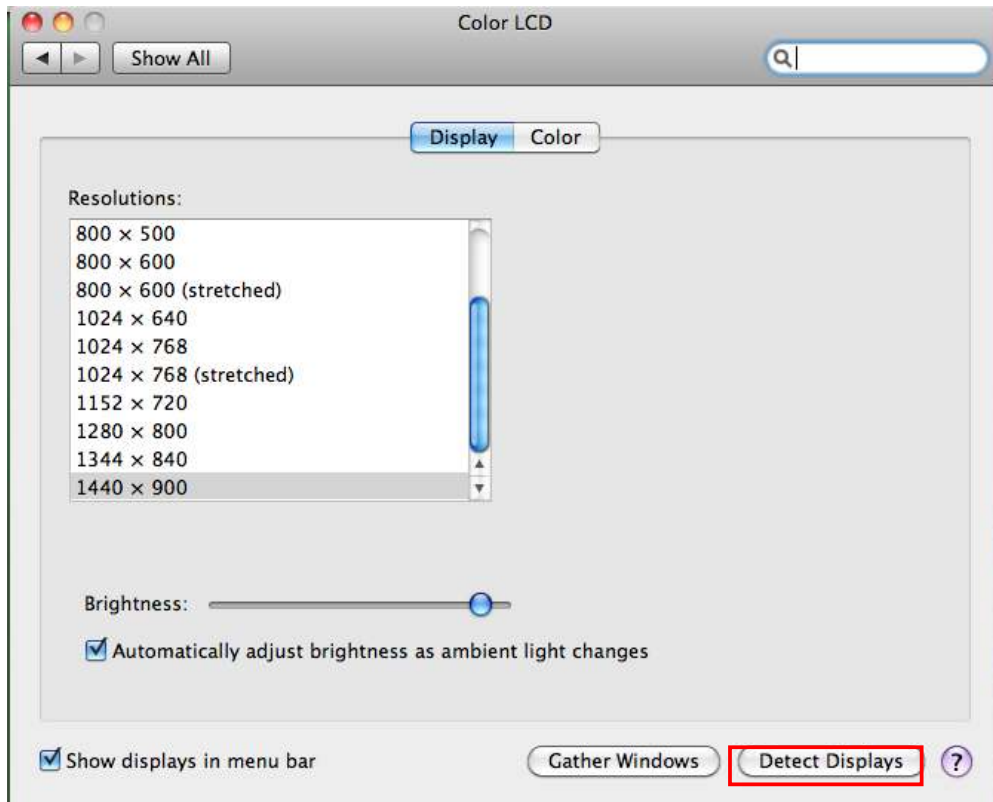


Figure 3-91

In Figure 3-91, click “Detect Displays” and then click the Apply button. You can see the corresponding monitor displays.

After you successfully extended the MAC desktop to several monitors, the PSS will automatically search the extension monitors and then set when it boots up. You can see the following 4-window interface if your setup is right. See Figure 3-92.

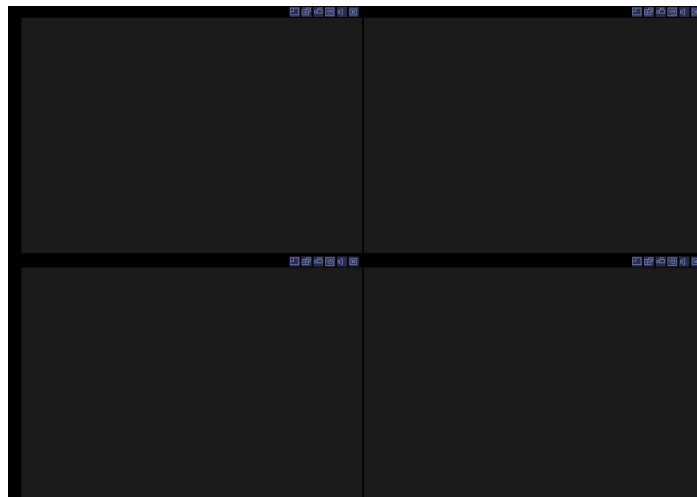


Figure 3-92

Now you can see the extension screen on the right Device List pane. Click the node; you can see the corresponding extension screen. See Figure 3-93.

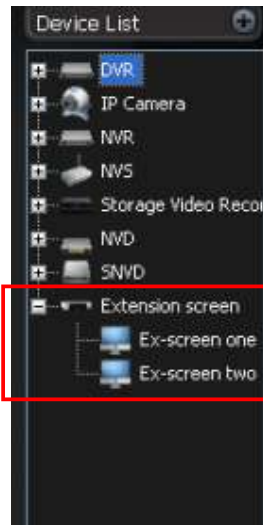


Figure 3-93

Right click the extension screen, and then select the extension screen setup item, you can see an interface shows as below. See Figure 3-95. Here you can set the unique name for each extension screen.

SN: The serial number is automatically given to each extension screen when it connected to the monitor. You need to check the box here to select current extension screen. **Please note, since PSS can maximally output to four monitors, the extension screen amount shall not be over three. You need to reboot to activate current setup.** Please note if you do not check the box of extension screen 2, you can not see the extension screen 2 in the device list though system can still search it. See Figure 3-94.



Figure 3-94

- Screen name: Please input the corresponding for current selected extension screen. Click the update button to save you current setup. Click the OK button, you can see the corresponding name in the Device List pane.
- Search: After you successfully installed and set the extension screen, PSS can automatically search the extension screen connected. For example, here you can see two extension screens.
- Identify: This function is for you to distinguish each extension screen connected. Click it you can see the serial number in the corresponding monitor.

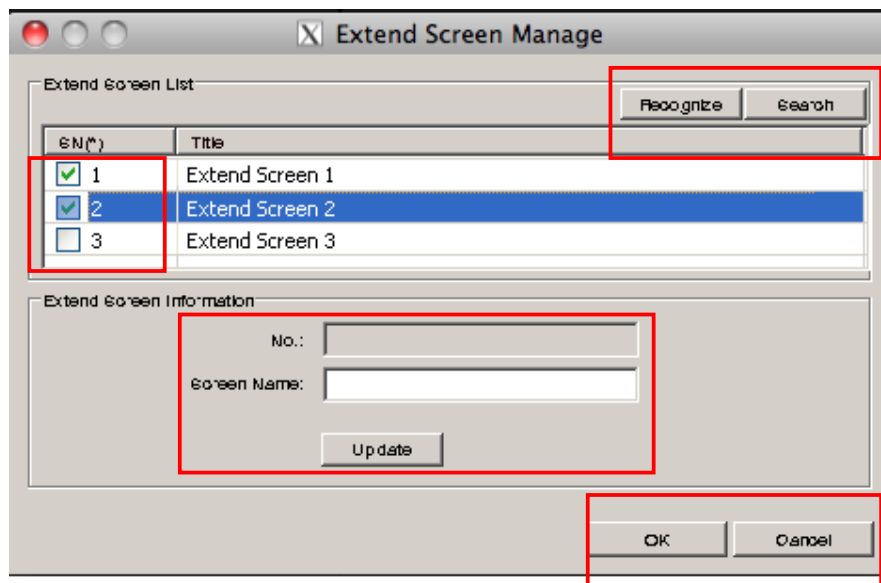


Figure 3-95

Now we are going to output the extension screen. The interface is shown as in Figure 3-96.

- Output current window to extension screen 2: Here you can select output current real-time video to the extension 2.
- Output all windows to extension screen 2: It is to output all real-time video in the main monitor to extension screen 2.

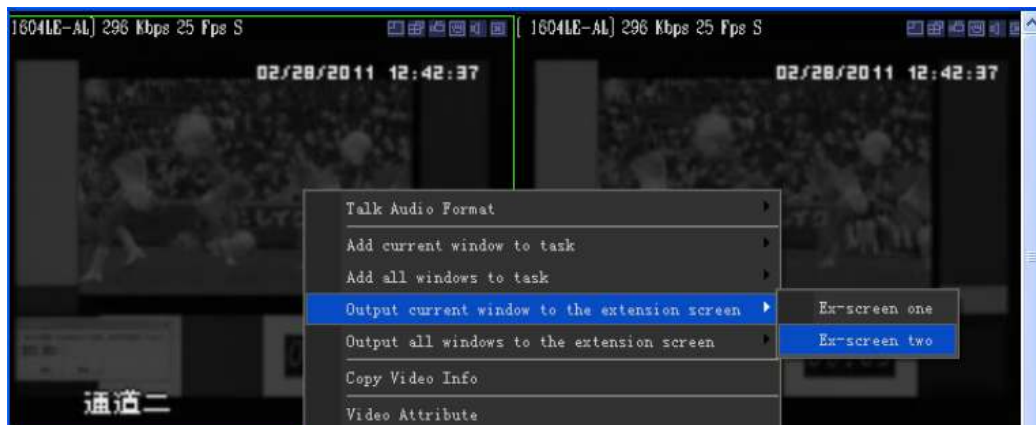


Figure 3-96

Right click the extension screen 2 in the Device List pane; you can see the following interface. See Figure 3-97.

- Output monitor task/project: Here you can output the monitor task or project you checked to the extension screen 2 or 1. This function allows you to output one or several monitor task(s)/project(s) to the extension screen. .
- Pause: You can click this item to pause current running task/project and the pause button becomes the resume button. The pause button is invalid if there is no running one.
- Resume: Click it to resume current paused monitor task/project. If there is no paused monitor task/project, the button becomes pause.
- Stop output: Click this button to stop the output to the extension screen if there is running task/project in the extension screen. And then the button pause and stop output becomes grey and invalid.

- Identify: This button is for you to distinguish each extension screen. Usually it shows the extension screen serial number. You can see the corresponding serial number (Such as number 2) flashes in the monitor centre for three seconds and then disappear. See Figure 3-98.

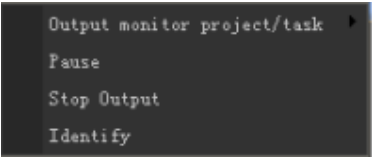


Figure 3-97



Figure 3-98

3.8.5.11 User Configuration

This function allows you to import or export user all configuration files. See Figure 3-99.

 


Figure 3-99

3.9 Device Health Status

Here you can update device status regularly, view disk health status; decode alarm, record and the alarm information you most concern.

Please go to chapter 3.7.5.2 Option to set the alarm information you most concern. See Figure 3-100.



Figure 3-100

Device health status interface is shown as in Figure 3-101. Please refer to the following sheet for detail information.

SN	Note
1	It is device name and its channel number. In Figure 3-101, you can view the device name is GBE and it has 16 channels.
2	HDD status. In Figure 3-101, HDD is running properly.
3	HDD is full or not. In Figure 3-101, HDD is running properly.
4	Decode or encoder alarm.
5	Device record status. Green light means current channel is recording. Please go to chapter 3.7.5.2 Option to set refresh interval.
6	It is the first alarm item you set in Figure 3-100. So, in Figure 3-101, you can see the external alarm information. Red light means there is an alarm. Please go to chapter 3.7.5.2 Option to set refresh interval.
7	It is the first alarm item you set in Figure 3-100. So, in Figure 3-101, you can see the external alarm information. Blue light means there is an alarm. Please go to chapter 3.7.5.2 Option to set refresh interval.
8	Device IP.

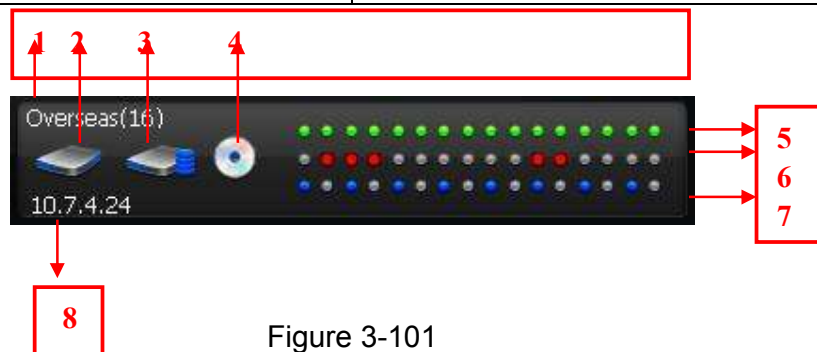


Figure 3-101

In Figure 3-101, double click mouse, you can go to alarm record interface. Please refer to chapter 3.7.2 Alarm for alarm record interface information.

Once there are HDD alarm and encode/decode alarm, the interface is shown as below. See Figure 3-102. You can see there is HDD error, HDD is full and the encode/decode alarm.



Figure 3-102

3.10 Full Menu

The full menu interface is shown as below. See Figure 3-103.

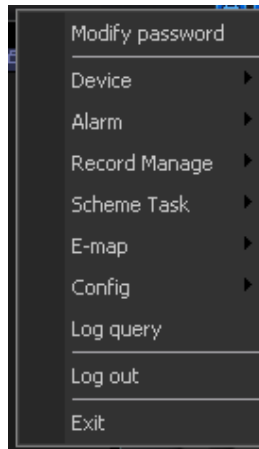


Figure 3-103

3.10.1 Modify Password

Please refer to chapter 3.7.5.1.

3.10.2 Device

It has the following sub-menu. See Figure 3-104.

- Device management: Please refer to chapter 3.8.5.8.
- Health report: Please refer to chapter 3.8.4.3.
- NVD manage: Please refer to chapter 3.8.5.9.
- NVD control: Please refer to chapter 3.8.4.2.
- SNVD manage: Please refer to chapter 3.8.5.10.



Figure 3-104

3.10.3 Alarm

It has the following sub-menu. See Figure 3-105.

- Alarm link (activation) video: Please refer to chapter 3.8.4.5.
- Alarm record plan: Please refer to chapter 3.8.5.4.
- Alarm management: Please refer to chapter 3.8.5.3
- Alarm arm enable: It means current alarm setup is valid or not.
- Motion detection, video loss, camera masking, and external alarm: You can draw a circle to enable it. Please refer to chapter 3.8.5.3.

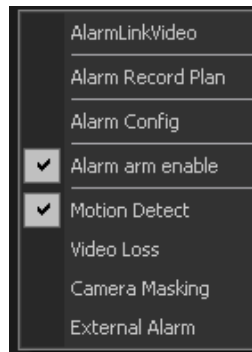


Figure 3-105

3.10.4 Record Manage

It has the following sub-menu. See Figure 3-106.

- Record plan configuration: Please refer to Chapter 3.8.5.2.
- Start /Stop: You can enable/disable record plan.
- Playback Please refer to Chapter 3.7.3.

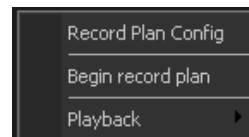


Figure 3-106

3.10.5 Scheme Task

It has the following sub-menu. See Figure 3-107.

- Scheme task configuration: Please refer to Chapter 3.8.5.1.
- Pause/Restore: You can click it to pause or restart task/project.
- Task1/Proejct1: You can draw a circle to enable current task/project.

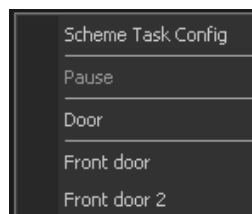


Figure 3-107

3.10.6 E-map

It has the following sub-menu. See Figure 3-108.

- E-map configuration: Please refer to Chapter 3.8.5.5.
- E-map view: Please refer to Chapter 3.7.4.

 


Figure 3-108

3.10.7 Configuration

It has the following sub-menu. See Figure 3-109.

- Option: Please refer to Chapter 3.7.5.2.
- Scheme task configuration: Please refer to Chapter 3.8.5.1.
- Alarm management: Please refer to Chapter 3.8.5.3.
- Record plan configuration: Please refer to Chapter 3.8.5.2.
- E-map configuration: Please refer to Chapter 3.8.5.5.
- User manage: Please refer to Chapter 3.8.5.7.
- Device management: Please refer to Chapter 3.8.5.8.
- NVD management: Please refer to Chapter 3.8.5.9.
- SNVD management: Please refer to Chapter 3.8.5.10.
- Extension screen manage. Please refer to Chapter 3.8.5.11.
- User configuration: Please refer to Chapter 3.8.5.12.

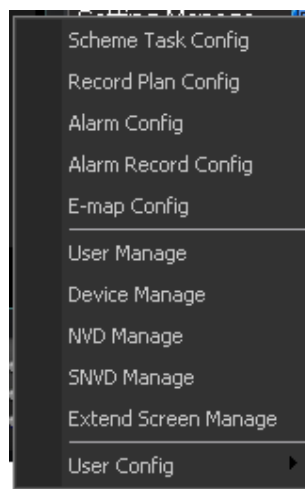


Figure 3-109

3.10.8 Log Query

Please refer to chapter 3.8.4.4 for detail information.

3.10.9 Log out

Click log out button, system pops up the following dialogue box. See Figure 3-110. Please input the proper password to exit PSS application. You can see the system goes back to login interface. You need to input user name and password to login again. Please refer to chapter 3.1.

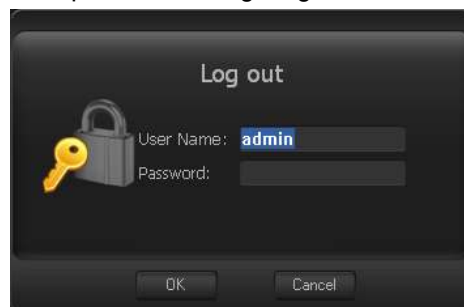


Figure 3-110

3.10.10 Exit

Click exit button, system pops up the following dialogue box. See Figure 3-111.
Please input proper password and then click OK button to exit PSS.



Figure 3-111

3.11 Tray Menu

Click tray menu, it is shown as in Figure 3-112.

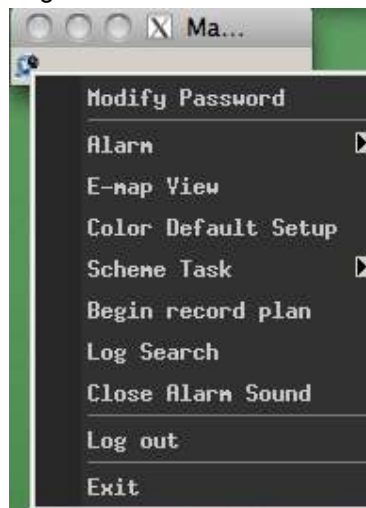


Figure 3-112

3.11.1 Modify Password

Please refer to chapter 3.7.5.1.

3.11.2 Alarm

It has the following sub-menu. See Figure 3-113.

Please refer to Chapter 3.10.3.

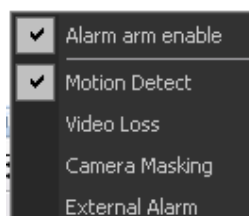


Figure 3-113

3.11.3 E-map View

Please refer to chapter 3.7.4.

3.11.4 Color Default Setup

Please refer to chapter 3.8.4.4.

3.11.5 Scheme Task

It has the following sub-menu. See Figure 3-114.

Please refer to chapter 3.10.5.

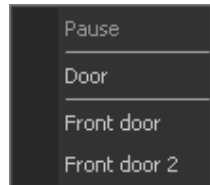


Figure 3-114

3.11.6 Begin/Stop Record Plan

You can click it to enable/disable current record plan.

3.11.7 Log Query

Please refer to chapter 3.8.4.4 for detail information.

3.11.8 Close Alarm Sound

Please refer to chapter 3.8.4.5.

3.11.9 Log out

Please refer to chapter 3.10.8.

3.11.10 Exit

Please refer to chapter 3.10.9.

4 Operation Instruction

4.1 Monitor Operation

Please follow the steps listed below to realize monitor operation.

1. Please add the monitor device to the device list. Please refer to chapter 3.8.5.8.
2. In the device list, right click mouse to log in the device. For your convenient, you can go to the chapter 3.7.5.2 to enable auto log in all devices when PSS boots up function.
3. Select channel number and then drag it to the corresponding window (or you just double click channel number), you can view real-monitor video. Please note current window has a green boundary.

Please note the camera name is the same with the device channel name setup. You can right click device name and then select advanced->device configuration item to modify channel name. You need to login again to activate current setup.

4. You can refer to chapter 3.6 to adjust screen display mode. Drag the screen window and then release, you can adjust displayed position. Please note, you can not adjust decode card sequence.
5. You can refer to chapter 3.5 for video tool information.

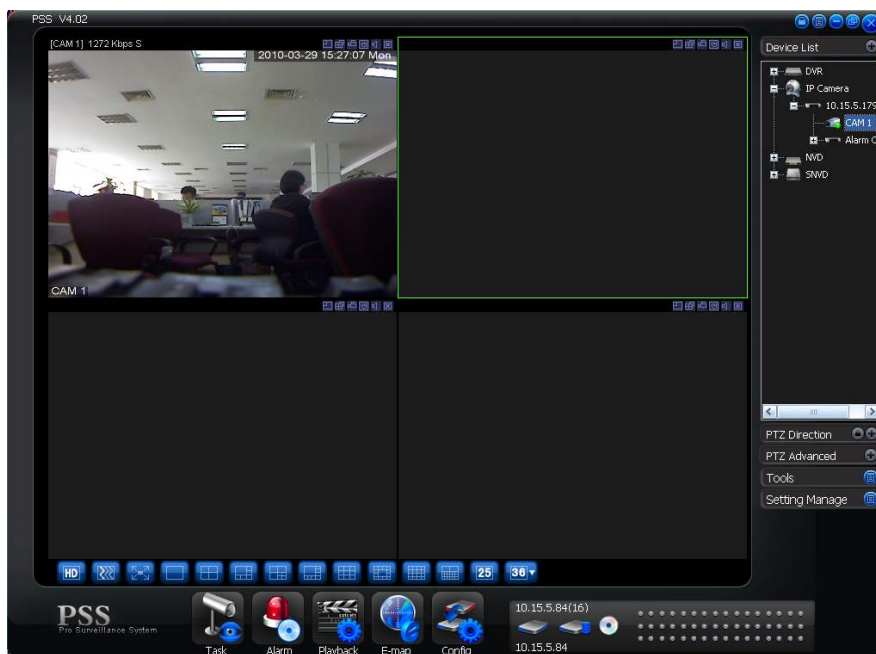


Figure 4-1

Please go to chapter 3.7.5.2 Option for full screen hot key setup.

Hot Key Setup: Real-time monitor window in full sc Ctrl + F *

In the screen, right click mouse, you can see the following interface. See Figure 4-2.

There are six items:

- Talk audio format: 1~n: audio name. You can view the bidirectional talk format the device supported. You can select one to begin audio talk. Please note one device supports one bidirectional talk only.
Left click the audio talk item or right click the window, you can see the audio encode mode

the device supported.

Please check the item to enable audio talk function, click it again you can disable current operation. Or you can click another item to begin a new operation.

- Add current window to the task: You can view task name from the dropdown list. Click it you can add current window to the Monitor task. If current window is in the task, the operation failed.
- Add all windows to the task: You can view the task name from the dropdown list. Click it you can add all windows to the Monitor task. If current window has been in the task, then the operation failed.
- Output current window to the extension screen: There are several extension screen names. You can click the corresponding name to output the current window to the specified extension screen. (**Important::** Please make sure you have added the extension screen, otherwise you can not see this item.)
- Output all windows to the extension screen: There are several extension screen names. You can click to output all windows to the specified extension screen. (**Important:** Please make sure you have added the extension screen, otherwise you can not see this item.)
- Copy video information: You can click it to copy current video information. After you click the button, you can see "paste video information" button.
- Paste video information: Click it you can paste selected video to current window.
- SNVD output: :(**Important:** Please make sure you have logged in the SNVD, otherwise you can not see this item.) You can view the logged in SNVD name: You can go to SNVD management to add the device, and then you can go to the Device list to login the device. SNVD monitor name: Click it, you can open the same video in the SNVD specified monitor.
- Video attribute: Click the video attribute button, you can see device name/channel title/stream type/video quality/real-time(fluent) level.

For detailed video control zone information, please refer to chapter 3.5.



Figure 4-2

4.2 Monitor Task and Monitor Project

1. Please refer to chapter 3.8.5.1 to establish task and project.
2. Please refer to chapter 3.7.1 to enable monitor task and monitor project.


4.3 PTZ Control

Before operation, please make sure current channel supports PTZ control.

Select step and then use the 8 direction buttons, you can realize PTZ control.

You can click the 3D intelligent positioning button to realize 3D intelligent positioning function.

Please note, during the whole process, other buttons are all invalid.

Click the lock icon , the PTZ interface becomes independent and can overlay the specified screen as you desire.

You can go to chapter 3.7.5.2 Option for hotkey setup.



For detail operation information, please refer to chapter 3.8.2 and chapter 3.8.3.



Figure 4-3

4.4 Playback

4.4.1 Device Record Playback

1. Please log in the device you want to search.
2. Click playback button
3. Select the device name and then select selected channel.
4. Select record type: Record/Alarm/Motion detection/card number.
5. Set search period or cad number.
6. Click search button.
7. You can draw a circle to select the corresponding result and then click download button to download to the local end.
8. Select one video window and then double click search result, you can playback the record.

4.4.2 Local Record Playback

1. Click playback button.

2. Select local record
3. Select the device name (if you want to search all devices, you can select unknown.). Then you can select channel number.
4. Select the record type: Record/Alarm/Card number and others.
5. Set search period or cad number.
6. Click search button.
7. In the searched results, click remove button you can delete local record. Select one video window and then double click search result, you can playback the record.

4.4.3 Download

Select the file(s) you want to download and then click download button.

During the download process, you can click cancel button to terminate current operation.

The download files information is automatically added to the local record. You can search from the local record.

Please note, the download process will pause if current channel is playback device record/ The download resume after playback completes.

4.4.4 Record Play Control

System maximally supports 4-ch playback.

Please refer to chapter 3.7.3 for playback information.

Double click video window you can adjust display mode.

You can enable snapshot function during playback.

4.4.5 Others

Please refer to chapter 3.7.3 for playback information.

Record playback can download the specified record to the local end.

The download files information is automatically added to the local record. You can search from the local record.

4.5 Snapshot and Manual Record

In real-time monitor or playback mode, you can enable snapshot or manual record function.

Please click snapshot to save current image to specified path.

You can click manual record button to enable recode function. Click it again, you can stop manual record.

The snapshot file or manual recorded file is automatically added to the local record. You can search to playback.

4.6 E-map

Please go to chapter 3.8.5.5 to establish E-map.

Please go to chapter 3.7.4 to view the detail e-map information.

E-map window can be displayed independently.

Double click the camera name in the E-map; you can enable real-time monitor function in the video window.

When alarm occurs, corresponding node becomes flashing.

4.7 Log out

Please refer to chapter 3.10.8 or chapter 3.11.9 for log out information.

Click log out button, the interface is shown as below. See Figure 4-4. You need to input the proper password and then click OK button to logout the PSS.



Figure 4-4

Now you can see system goes back to log in interface. See Figure 4-5. Current operation and configuration all stopped. You need to input user name and password to log in. The record plan, task and project, shortcut key, and right information are all for logged in user.



Figure 4-5

5 Peripheral Device Operation

5.1 Decode Card

The decode card is one of our series product. The decode card can greatly reduce CPU resources.

Before setup, please make sure you have installed encode card, and you have enabled the “loading decode card when PSS booted up” in the Option interface (chapter 3.7.5.2).

The decode card can output video to the TV or VGA device. You can just select the video channel and then drag it to the decode card binding monitor channel.

For decode card configuration operation, please refer to chapter 3.8.5.6.

5.2 NVD

5.2.1 Menu

NVD is a network video decoder. It is one of our series products. It can connect to the video sourcing device. It has TV output and TV video split.

You can go to the NVD manage interface from the right tool button. See Figure 5-1.

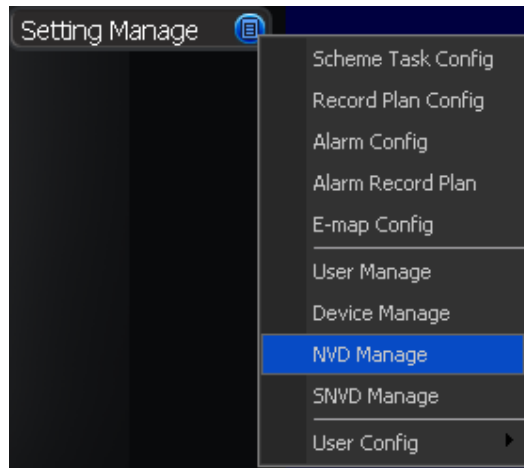


Figure 5-1

NVD is a network device, you need to add NVD device first and then use it.

Please refer to chapter 3.8.5.9 for NVD device manage

Please refer to chapter 3.8.4.2 for NVD control operation.

5.2.2 NVD Control Principle

Please read the following principles so that you can understand how the PSS control the NVD.

- PSS logged in NVD and then control NVD.
- PSS transfer the device information and channel information to the NVD and then NVD can log in the other devices to enable video.
- PSS control NVD to enable video and split video
- NVD can output the video data after split. (The data here can be the input video of the other device.)
- NVD has four video outputs and each video output can integrate video from four channels to a four-channel video window.

- Please note you need to log in the NVD if you want to use it.

5.2.2.1 Operation

NVD operation consists of four sections: operation, tour, decode tour and TV adjustment. All the operations become active when NVD is running normally.

On the top left, you can view the added NVD device. On the top button, you can view other video sourcing devices.

Remotely control the NVD to open the video and then switch the split mode. The operation is the same as the general video zone. But the video window only displays current connected device IP and channel serial number, the NVD video is not in the window. See Figure 5-2.

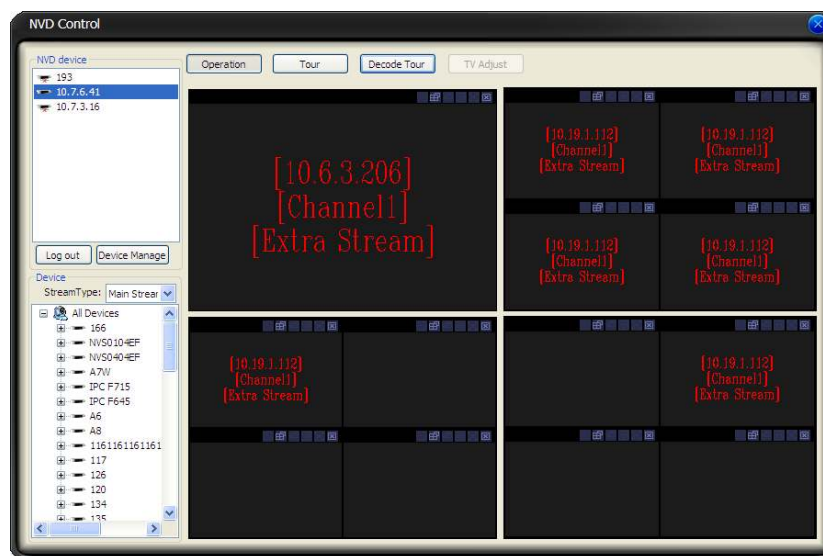


Figure 5-2

If you see the following dialogue box, you can see the NVD has reached the max decode capacity. See Figure 5-3.



Figure 5-3

Please close the video channel, until you see the following dialogue box. See Figure 5-4. Now the NVD has restored capacity and can run properly.

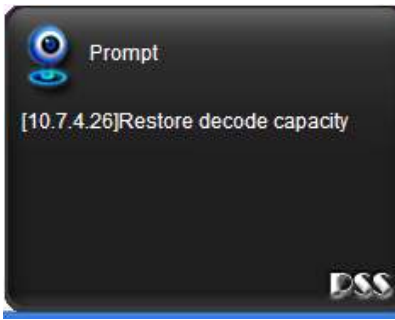


Figure 5-4

Important

Do not connect the PAL format device and NTSC device to the same NVD!

Audio talk

This function is for G6 special series only.

The audio talk is the audio transmission between the video sourcing device and NVD.

In the NVD interface, right click mouse to open the channel window. System pops up the audio encoded mode system supported, you can select to enable audio talk mode.

Please note if the video sourcing device and NVD has no common audio encode mode, then the audio talk function can not be enabled.

Note: One device supports one audio function only.

5.2.2.2 Tour

Tour interface is shown as in below. See Figure 5-5.

- Search: Search the selected TV output tour setup of current NVD device.
- Add: Add current tour information to the TV output channel of current device.
- Delete: Click it to remove the selected tour setup information.
- Delete all: Click it to remove all tour setups of current TV output channel.
- Tour: Click it to begin the tour setup.
- Interval: The operation interval between the tour setups.

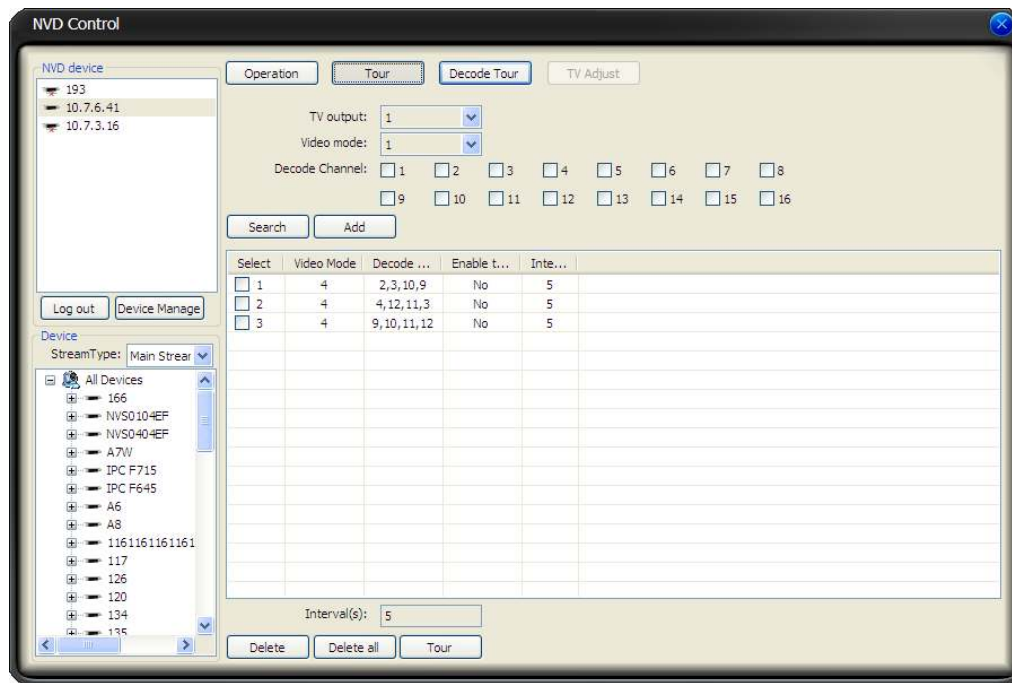


Figure 5-5

Tour: Remotely control NVD to distribute the video sourcing to realize remote tour function (TV output).

Video mode: Now system supports 1/4 window split. Double click one video window, you can switch video display mode, it can display in the NVD output device immediately. See Figure 5-6.

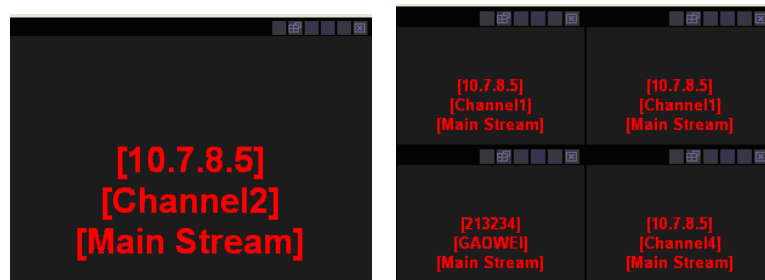


Figure 5-6

5.2.2.3 Decode tour

The decode tour interface is shown as in Figure 5-7.

- NVD device: Here you can view the NVD device you selected from the NVD device tree.
- Decode channel: Here you can select the decode tour channel of the NVD device.
- Stay time (s): Here you can select the interval between the decode tour. It is the video stay time in each channel.
- Video channel: You can drag the video channel on the left corner to the column here and then release to set the video channel information.
- Add: Click it a odd current video channel tour information to the list.
- Update: Update the list to the latest information.
- Cancel: Restore the video channel information. Do not save current modification.
- Delete: Click it to delete the selected item in the list.

- Delete all: Click it to delete all the items in the list.
- Save: Save the latest setup information in the remote NVD device.
- Pause: Pause the decode tour operation of the remote NVD device.
- Resume: Restore the decode tour operation of the remote NVD device.
- Stop: Stop the decode tour operation of the remote NVD device.
- Start: Begin the decode tour operation of the remote NVD device.

Please note, the add/delete operation only becomes valid when the NVD connection is OK.

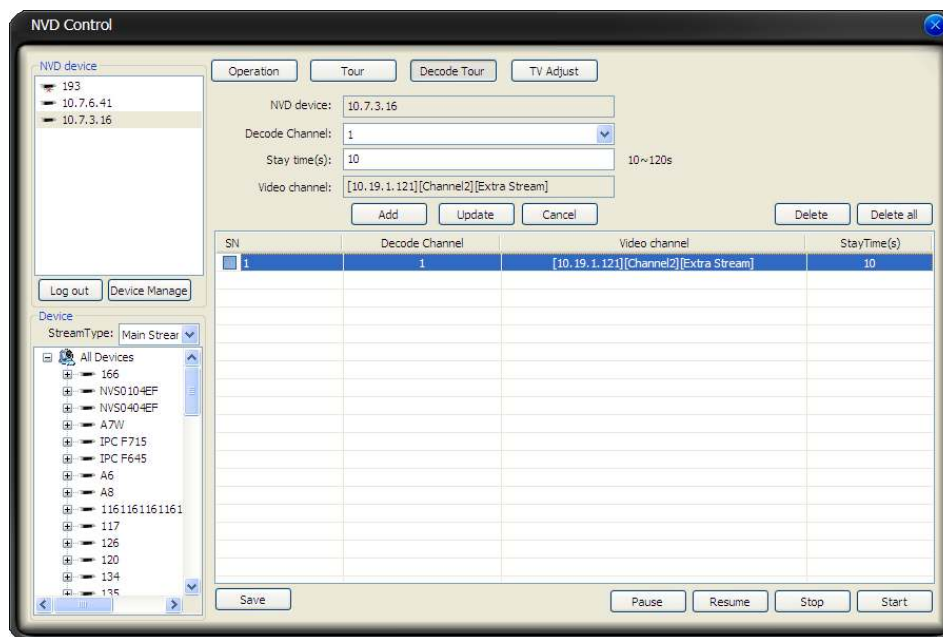


Figure 5-7

5.2.2.4 TV adjustment

The TV adjust interface is shown as below. See Figure 5-8.

- TV adjustment: It is the TV output port serial number of the NVD (the actual amount is defined by the NVD model.)
- Up adjustment: It is to adjust the TV up boundary position. The value ranges from 0 to 100.
- Right adjustment: It is to adjust the TV right boundary position. The value ranges from 0 to 100.
- Left adjustment: It is to adjust the TV left boundary position. The value ranges from 0 to 100.
- Bottom adjustment: It is to adjust the TV bottom boundary position. The value ranges from 0 to 100.

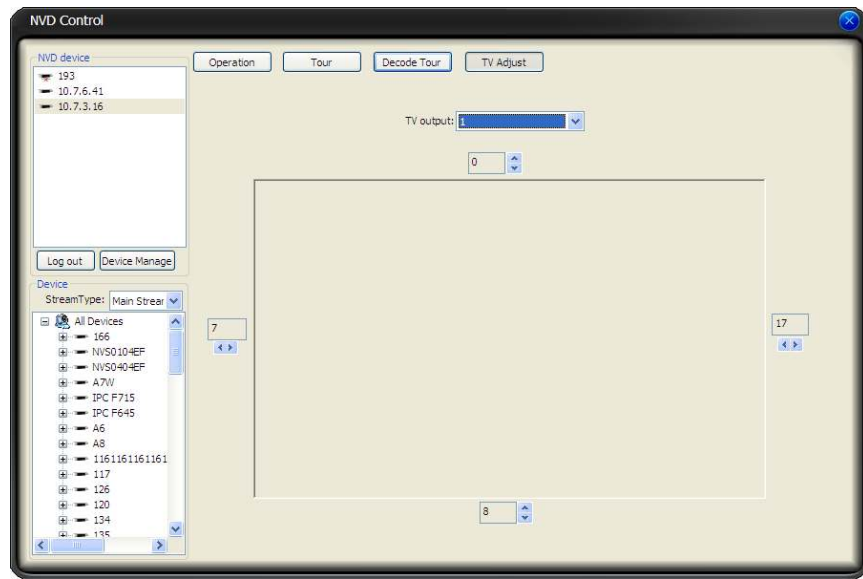


Figure 5-8

Note:

- This user's manual is for reference only. Slight difference may be found in the user interface.
- All the designs and software here are subject to change without prior written notice.
- If there is any uncertainty or controversy, please refer to the final explanation of us.
- Please visit our website for more information.